

SHARP® PARTS GUIDE



COLOR LED PRINTER

MODEL AR-C360P

11.01.2005


COLOR LED PRINTER

MODEL AR-C360P

Table of Contents

Main	5
Printer-Unit 1/2.....	8
Printer-Unit 2/2.....	9
Plate-Assy-Power	14
Base-Assy 1/2.....	16
Base-Assy 2/2.....	17
Side-R-Assy	20
Side-F-Assy	23
Duct-Drive-Assy	25
FDR-Unit-Regist.....	27
FDR-Unit-MPT	30
Eject-Assy	33
Plate-Top-Assy	35
Job-Offset-Assy	37
Basket-Assy	39

MAIN

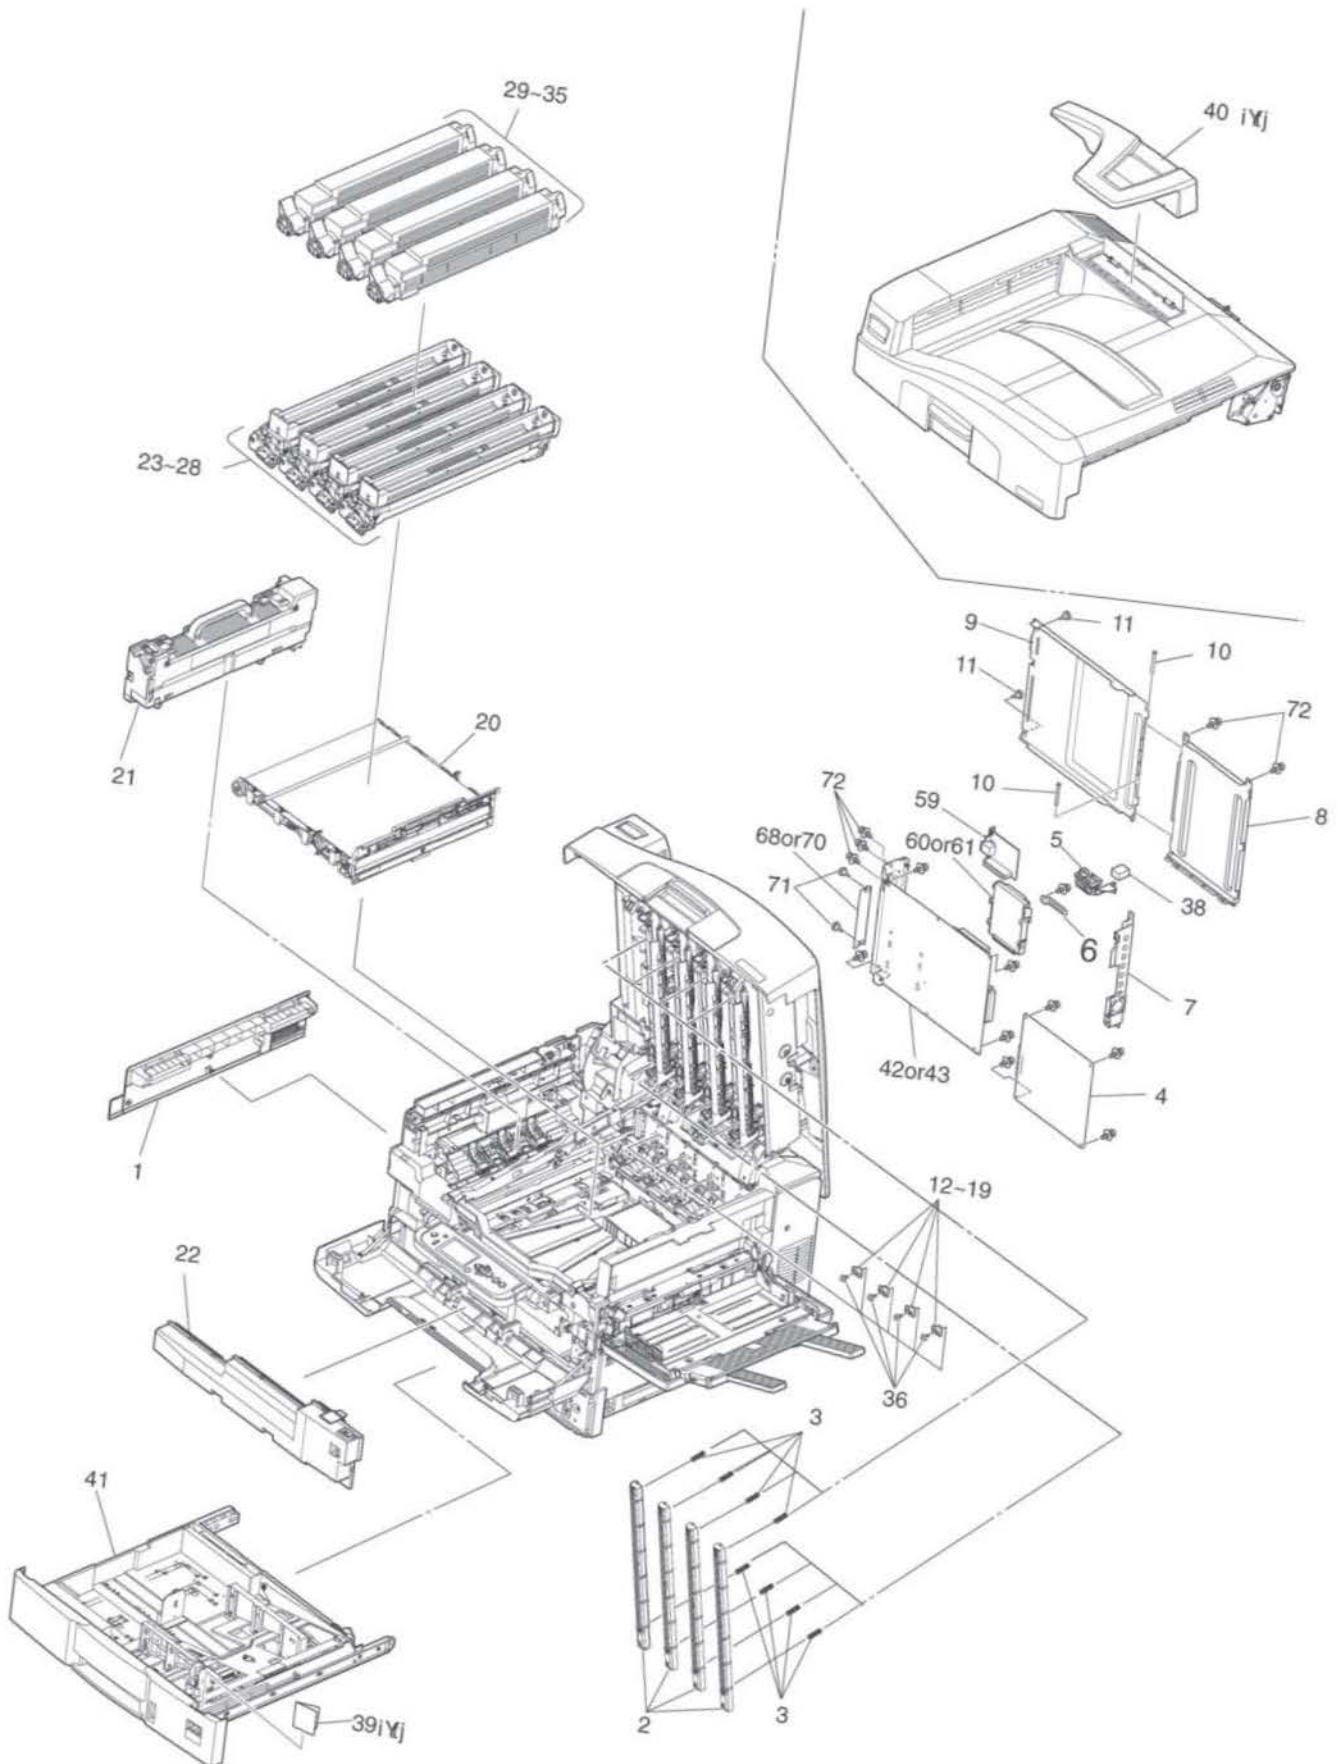


WWW.SERVICE-MANUAL.NET


Where no part number exists, the parts are only available in their respective assemblies.

No.	Parts No.	Name	Remarks
1	0ZZ42710201//	Cover-Blank(Dup)	
2	0ZZ42579001//	LED Head-Unit-63MXF	1200dpi
3	0ZZ42764301//	Spring-Head	
4	0ZZ42868013//	OR-S2V (Eng Board 1200dpi)	
5	0ZZ42780701//	Code-Clump	
6	0ZZ42859101//	Plate-Clump-HCB	
7	0ZZ42781301//	Plate-Beam	
8	0ZZ42780901//	Plate-Shield	
9	0ZZ42781101//	Plate-Cover	
10		Shaft-Shield	
11		Screw-Knob	
12		Block-Lockout-723	
13		Block-Lockout-723-2	
14		Block-Lockout-723-3	
15		Block-Lockout-723-4	
16		Block-Lockout-723-5	
17		Block-Lockout-723-6	
18		Block-Lockout-723-7	
19		Block-Lockout-723-8	
20	0ZZ57102501//	Belt-Unit-723	
21	0ZZ57102701//	Fuser-Unit-723-120V	120V
		Fuser-Unit-723-230V	230V
22		Box-Waste-Toner	
23-		ID Unit Type C7 Y	
28		ID Unit Type C7 M	
		ID Unit Type C7 C	
		ID Unit Type C7 K	
29-35		Toner-Cartridge Type C7 Y	
		Toner-Cartridge Type C7 M	
		Toner-Cartridge Type C7 C	
		Toner-Cartridge Type C7 K	
36		Cup_Screw (S Tight M3)	
37		Cup_Screw A	
38	0ZZ43051901//	Gasket-HCB	
39	0ZZ41501901//	Indicator-Paper-Size(OKI)	
40	0ZZ42967901//	Stopper-Paper	
41	0ZZ42703601//	Case-Cassette-Assy.	
42			
43	0ZZ42807602//	Board-ASP	1200dpi
44		EEPROM(CU)	1200dpi
45	0ZZ42968801//	EEPROM(CU),Key-chip	1200dpi
46	0ZZ42912201//	BIOSROM	1200dpi
47			
48			
49			
50			
51			
52			
53	0ZZ42314837//	Board-Memory 128MB	
54	0ZZ42314838//	Board-Memory 256MB	
55	0ZZ42314839//	Board-Memory 512MB	
56			
57			

WWW.SERVICE-MANUAL.NET

58			
59	0ZZ42921801//	OR-HMK Assy	Soft NIC
60			
61	0ZZ50137002//	HDD Assy 20GB for Maintenance	EFI GA
62		Compact Flash	
63		Nyron Stud	
64			
65		Plate-Interface Caulking	1200dpi
66		Guide-Rail	
67		Plate-Support-PCI	
68			
69		Plate-Blank-N	1200dpi
70	0ZZ42854701//	Plate-Blank-W	1200dpi
71	0ZZ41723901//	Screw-Knob	
72		Cup_Screw (S Tight M3)	
73		Screw	
74			
75	0ZZ42861301//	Motor-Fan(CU)	1200dpi
76	0ZZ42925201//	Motor-Fan(CU)	1200dpi
77		Bracket-Fan-CU1	1200dpi
78		Bracket-Fan-CU2	1200dpi
79		Screw-PSW3	
80	0ZZ43037901//	Gasket-Interface-A	
81	0ZZ43038001//	Gasket-Interface-B	
82			
83			
84			
85		0494 001NR	600dpi/1200dpi Fuse(CU board)
86		TFC-20/TFT-102010N (Core of LAN cable)	600dpi/1200dpi JPN/AOS

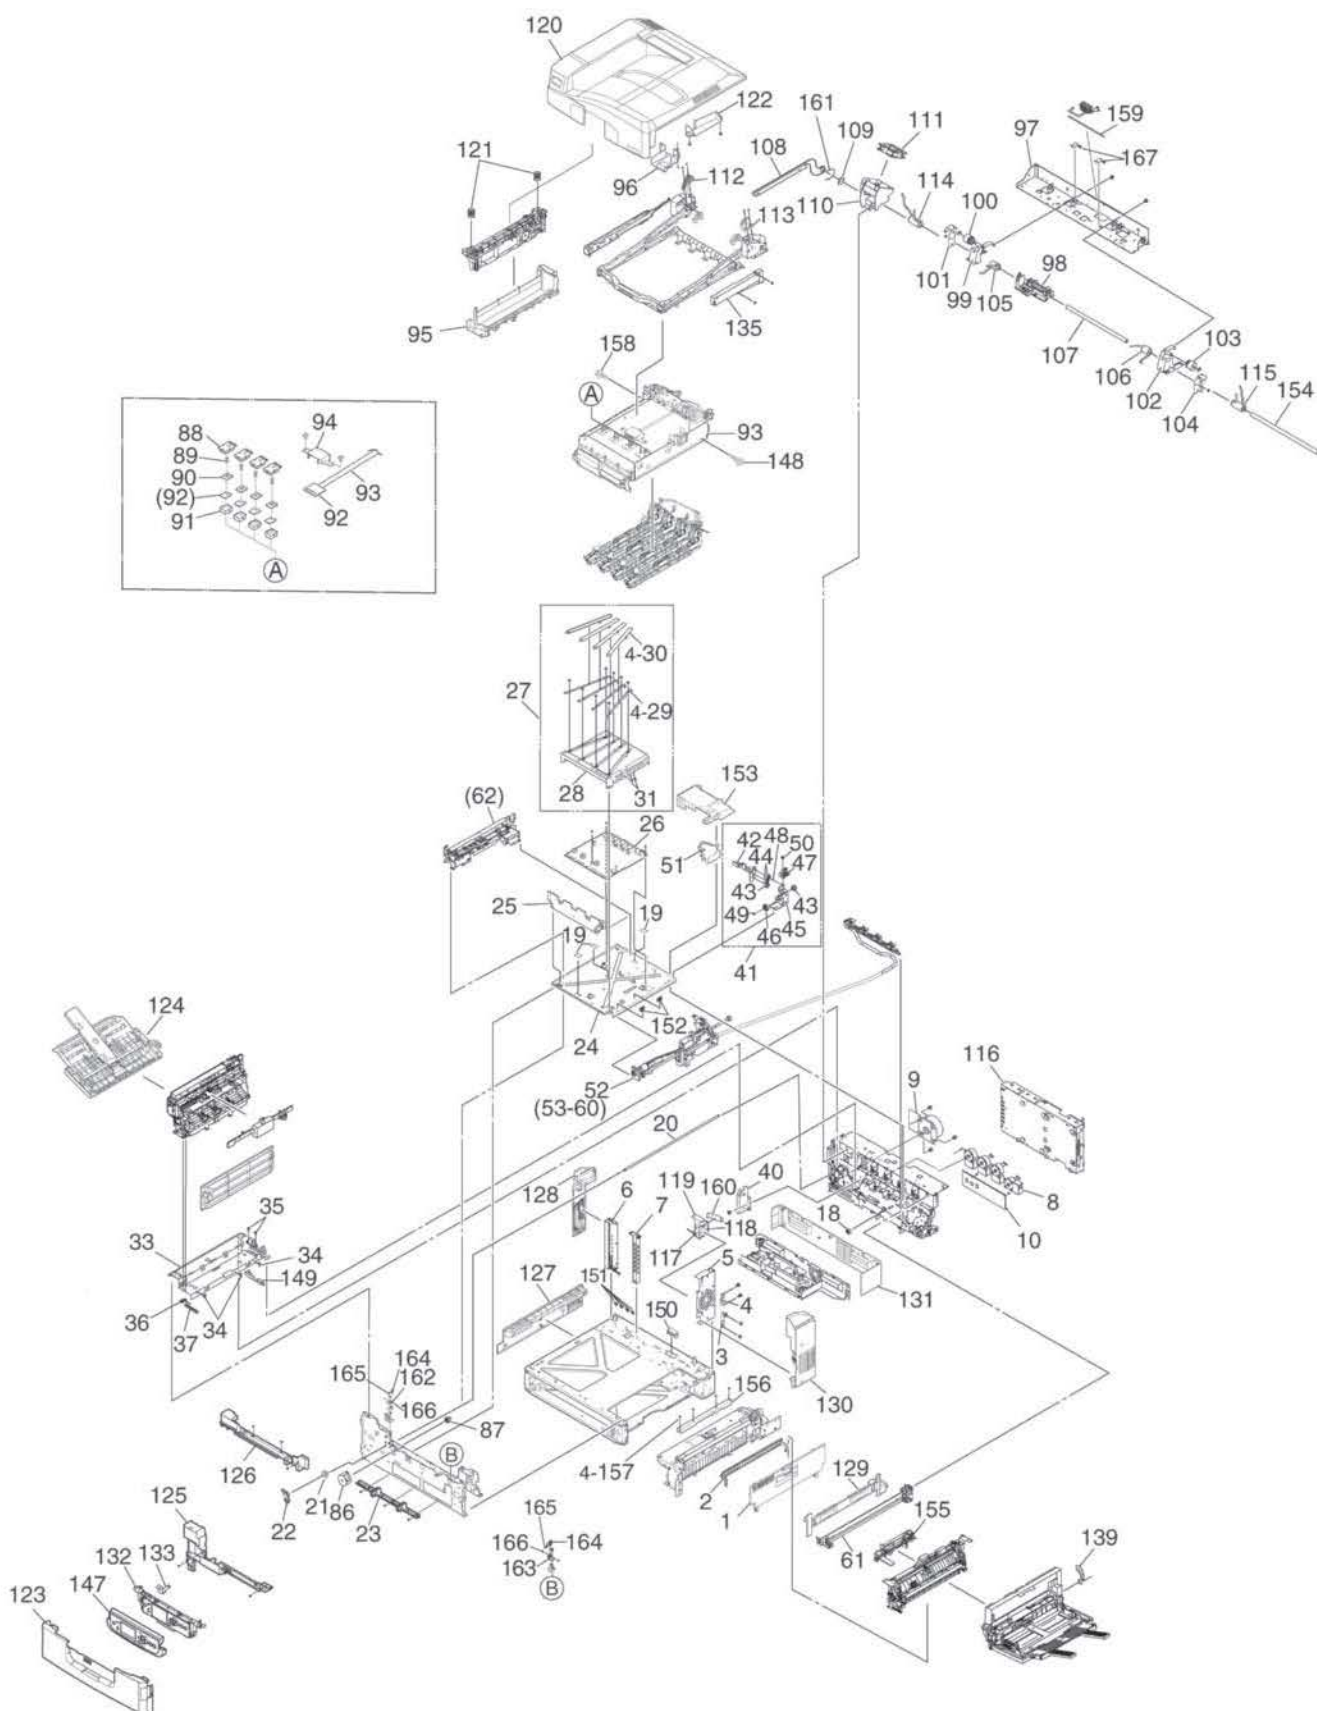

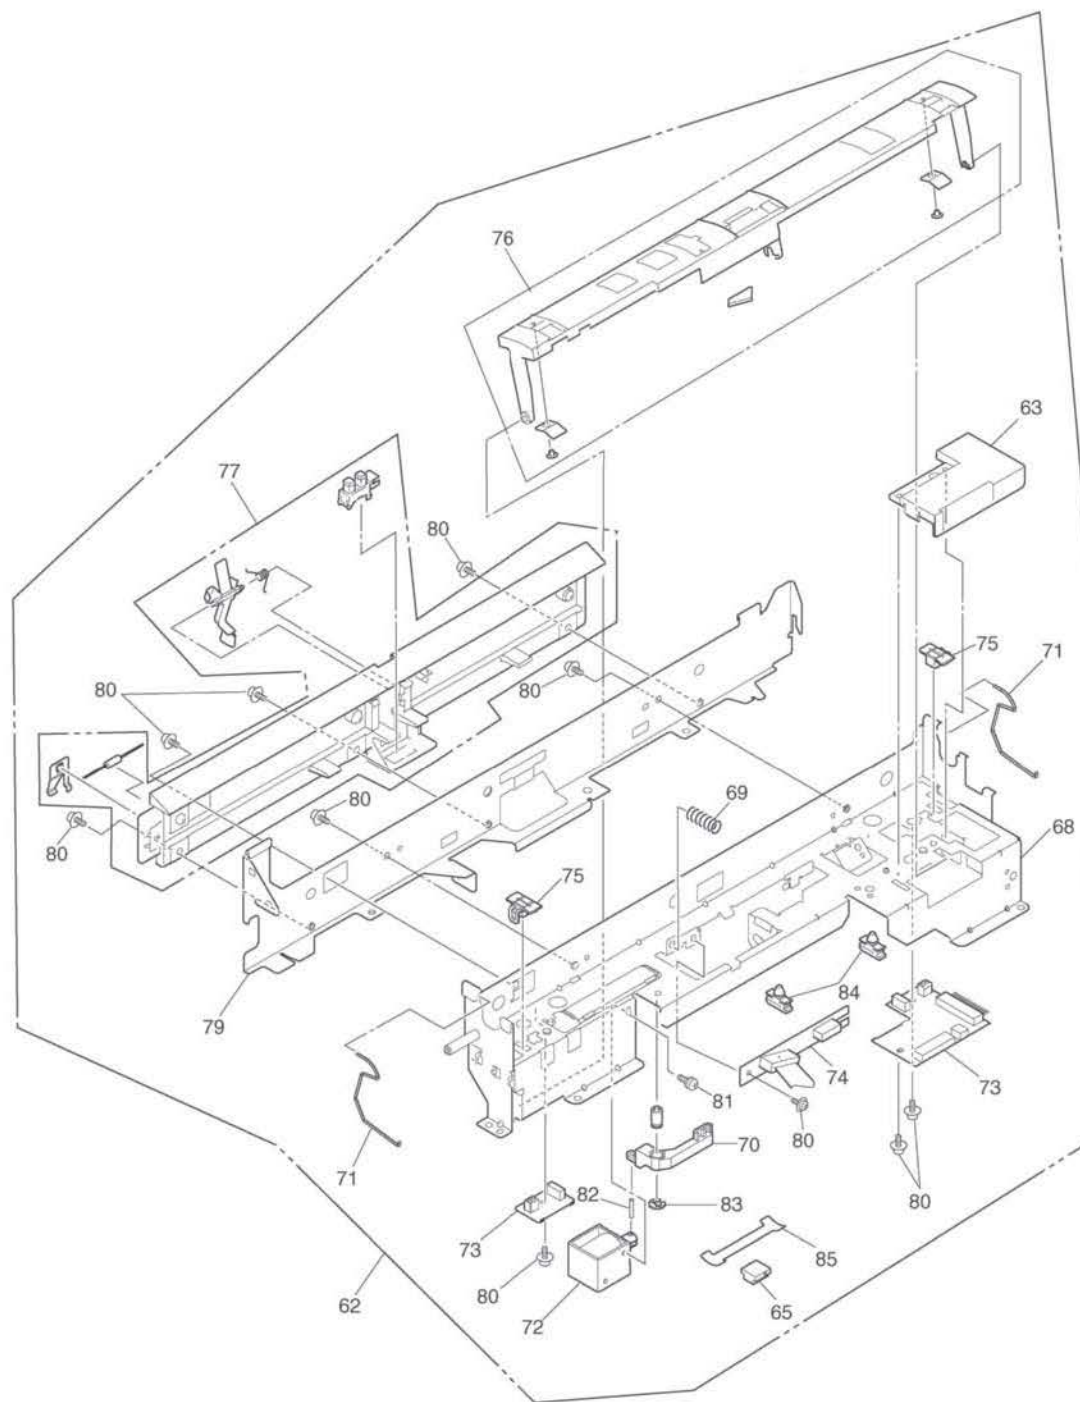


No.	Parts No.	Name	Remarks
1	0ZZ42702301//	Cover-Guide-1st-Assy	
2	0ZZ42702701//	Guide-Paper	
3		Plate-Stay-A	
4		Plate-Stay-B	
5	0ZZ42720801//	Plate-Support-A	
6	0ZZ42720901//	Plate-Support-B-Assy	
7	0ZZ42721101//	Plate-Support-C	
8	0ZZ42985001//	Motor-DC(ID)	
9	0ZZ42864302//	Motor-DC(FUSER)	
10	0ZZ42868111//	OR-S2M (Motor Driver Bd)	Motor Driver Board
11		CONN Cord-HIROSE6P-H2P,H4P	
12		CONN Cord-JST2P-JST2P	
13		CONN Cord-AMP11P-AMP11P	
14		CONN Cord-AMP4P-AMP4P	
15		CONN Cord-JST5P-JST4P	
16		TW-VF-16-0.1X0.8-420 u CONN PAR-	-
17		SMCD-40-160BD(1.0) CONN PAR-	-
18		SMCD-30-160BD(1.0) CONN PAR-	-
19	0ZZ42930001//	Film-Guide FFC	
20	0ZZ42736301//	Shaft-LiftUp	
21	0ZZ42060701//	Bush	
22		Planet Assy.-F	
23	0ZZ42705901//	Frame-Holder	
24		Plate-HV-Base	
25	0ZZ42737101//	Bracket-HV-Assy	
26	0ZZ42426501//	PWR unit-(HIGH VOLTAGE)	
27	0ZZ42737601//	Cover-HV- Assy.-	Assy(Include:No.28-32)
28		Cover-HV	
29		Contact-TR	
30		Cover-Contact-TR	
31	0ZZ42738001//	Spring-Fuse-Belt	
32		TappingScrew-B2 L=8	
33		Plate-Heat	
34		Clamp-Cable	
35		Stad-Shoulder	
36	0ZZ40135301//	Photo-Interrupter	
37		Cover-Cable-Heat A	
38		CONN Cord-JST4P-JST4P	
39		CONN Cord-JST12P-JST6P,JST7P	
40		Plate-Guide-ID	
41	0ZZ42738501//	Gear-Duct-ID- Assy.	Assy(Include:No.42-50)
42		Bracket-D-Caulking	
43		Gear-Bevel	
44		Gear-Idle-D	
45		Bracket-B-Caulking	
46		Gear-Idle	
47		Holder-Hall-Duct	
48		Ring	
49		Ring	
50		Cup_Screw (S Tight M3)	
51	0ZZ42742801//	Guide-Tube-L	
52	0ZZ42967301//	Duct-Gear-Assy	Assy(Include:No.53-60)
53		Duct- Assy.-Toner	

54		Plate-BKT-Duct A Caulking	
55		Plate-BKT-Duct B	
56		Gear-Reduction-Tube	
57		Gear-Idle-BBD	
58		Gear-Idle-D	
59		Gear-WT-Z20-Z21	
60		Cup_Screw (S Tight M3)	
61	0ZZ42749801//	Plate Assy.-MPT Lock	
62	0ZZ42754701//	Sensor-Regist- Assy.	Assy(Include:No.63-67)
63		Cover-Connector	
64	0ZZ42646501//	CONN Cord-AMP2P-AMP2P	
65		292254-2 Connector-Plug-	
66	0ZZ42644601//	CONN Cord-AMP14P-AMP14P	
67	0ZZ42978901//	Sensor-Regist-Sub-Assy	Assy(Include:No.68-85)
68		Plate-Po-Caulking	
69		Spring-Shutter	
70		Lever-Solenoid	
71		Spring-Belt-Fix	
72	0ZZ42755801//	DC-Solenoid	
73	0ZZ42888701//	OR-S2Z (Reg Sensor Bd)	
74		GP2TC2 SENSOR-Density -	
75		Plate-Guard-Sensor	
76	0ZZ42755401//	Shutter- Assy.-	
77	0ZZ42811301//	TARUMI-Sensor Assy.-	
78		CONN Cord-AMP12P-MOLEX5P,AMP3P,AMP3P	
79		Plate-Beam	
80		Cup_Screw (S Tight M3)	
81		Screw (SW+W)	
82		Pin	
83		Ring	
84		Clamp-Cable	
85		Film-Cable-Guide	
86	0ZZ42756901//	Motor-Pulse-Belt	
87	0ZZ42757001//	Gear-Idle-Belt	
88		Holder-ANT	
89	0ZZ42762701//	Spring-ANT	
90		Bracket-ANT	
91		Cover-ANT	
92	0ZZ42459201//	RFID read witer system(incorporated type)	
93		SMCD-9-560BD(1.0) CONN PAR- -	
94		Plate-Shield-RFID	
95	0ZZ42707001//	Cover Assy.-Top(Sub)	
96	0ZZ42707301//	Cover-Duct(L)	
97		Plate-Shaft-Base	
98		Code-Guide	
99	0ZZ42734101//	Plate-Damper-TCL-Caulking	
100	0ZZ42836102//	Damper-L	
101	0ZZ42768001//	Plate-Damper-TCL-SUB	
102	0ZZ42734401//	Plate-Damper-TCR-Caulking	
103	0ZZ42836202//	Damper-R	
104	0ZZ42768101//	Plate-Damper-TCR-SUB	
105		Spring-Torsion-Top-L	
106		Spring-Torsion-Top-R	
107	0ZZ42767901//	Shaft-Top	
108	0ZZ42707401//	Plate-Support(Top)	

109		Collar	
110	0ZZ42707601//	Frame-Duct	
111	0ZZ42781701//	Motor-Fan	
112		Gear-BKL2	
113		Gear-BKR2	
114		Spring-Torsion-BAS-L	
115		Spring-Torsion-BAS-R	
116	0ZZ42780001//	Plate-Shield-Box- Assy.	
117	0ZZ42781501//	Holder-Duct-FAN-PCB	
118	0ZZ42781701////	Motor-Fan	
119	0ZZ42781601//	DUCT-FAN-PCB	
120	0ZZ42708001//	Cover Assy.-Top	
121	0ZZ42708401//	Spring-Comp(Joboff)	
122		Cover-Duct(R)	
123	0ZZ42708601//	Cover Assy.-Front	
124	0ZZ42709001//	Cover Assy.-FU	
125	0ZZ42709401//	Cover-Guard(L)	
126	0ZZ42709501//	Cover-Guard(Front)	
127	0ZZ42709701//	Cover-Side(L)	
128	0ZZ42709801//	Cover-Side(L)Rear	
129	0ZZ42709901//	Cover-Side(R)	
130	0ZZ42710001//	Cover-Side(R)Rear	
131	0ZZ42710101//	Cover-Rear	
132	0ZZ42706001//	Cover Assy.-OP Panel	
133	0ZZ42706701//	Film-FG	
134		TW-VF-6-0.1X0.8-930 CONN PAR- -	
135	0ZZ42919201//	Guard-R	
136		Cup_Screw (S Tight M3)	
137		Cup_Screw A	
138		TappingScrew-B2 L=8	
139		Stay-Rear-MPT	
140		Ring	
141		Ring	
142		SMCD-20-370-AD-P1.0 CONN PAR- -	
143		CONN Cord-AMP10P-AMP9P	
144		292254-9 Connector-Plug-	
145		CONN Cord-JST3P-JST3P	
146	0ZZ42970901//	OR-HAL (Toner SNS PWB)	
147	0ZZ42706101//	Cover-OP Panel	
148		Limiter-Screw	
149		Cover-Cable-Heat B	
150		Guide-Cable_CU	
151		Clamp-Cable	
152		Clamp-Cable	
153	0ZZ42914601//	Cover-Middle	
154		Shaft-Cover	
155		Cover-Snsor(S2S)	
156		Plate-Support	
157		Cup_Screw A	
158		Limiter-Screw	
159		Code-Guide-Receive	
160		Plate-FG-Rear	
161	0ZZ43052901//	Spring-Torsion-FG	
162		Plate-Holder-Detent-L	
163		Plate-Holder-Detent-R	


164		Lever-Detent	
165		Spring-Detent	
166		Post-Detent	
167		Plate-FG-T-Shaft	


Plate-Assy-Power

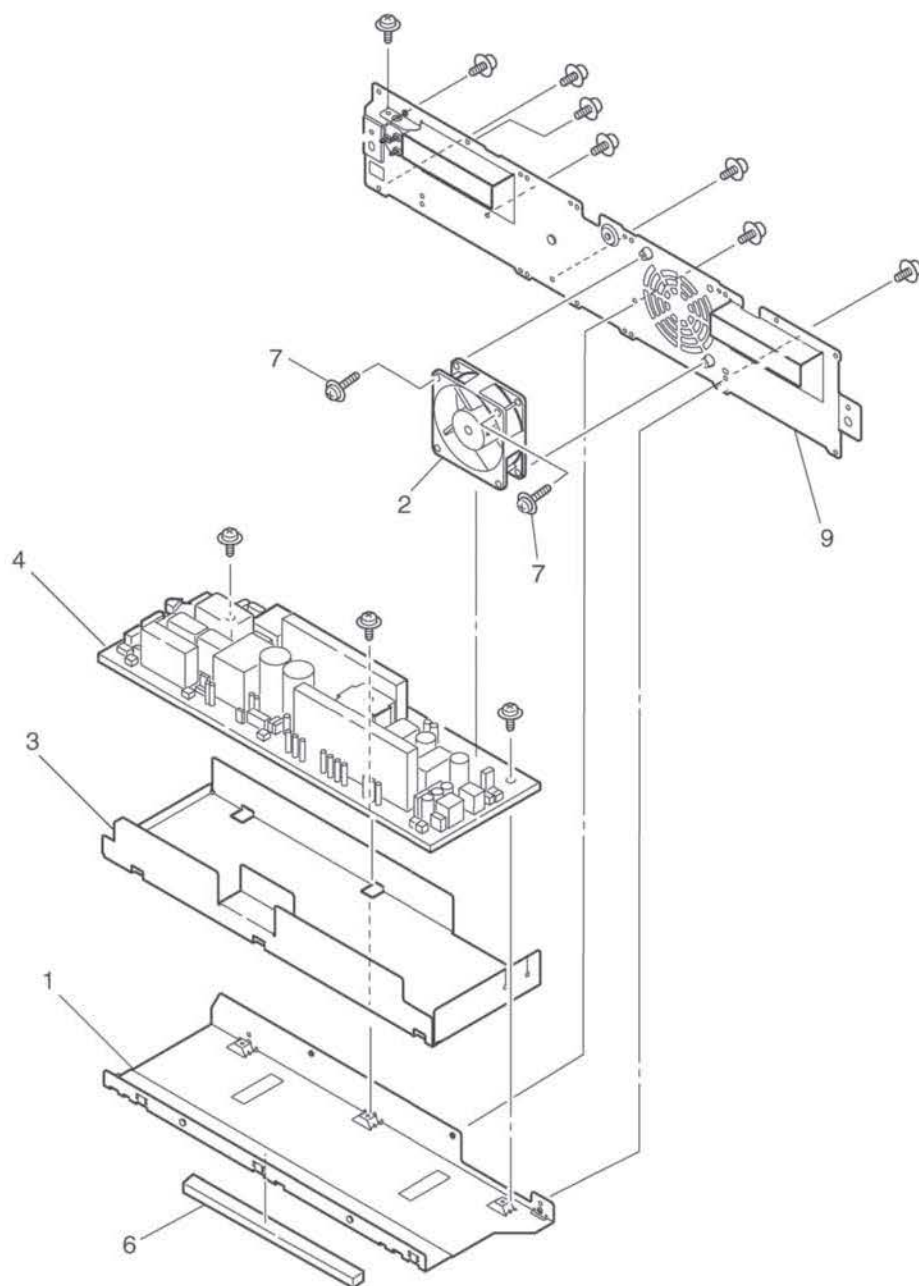

No.	Parts No.	Name	Remarks
1	0ZZ42703301//	Plate-Power	
2	0ZZ42703401//	Motor-Fan	
3		Film-Insulation	
4	0ZZ42463101//	PWR unit-ACDC Switch	100/120/230V
5		Cup_Screw (S Tight M3)	
6		Gasket	
7		Screw (SW+2W)	
8		Screw (SW+2W)	
9		Plate-Rear-Base-Caulking	
10		Cup_Screw A	

Base-Assy 1/2

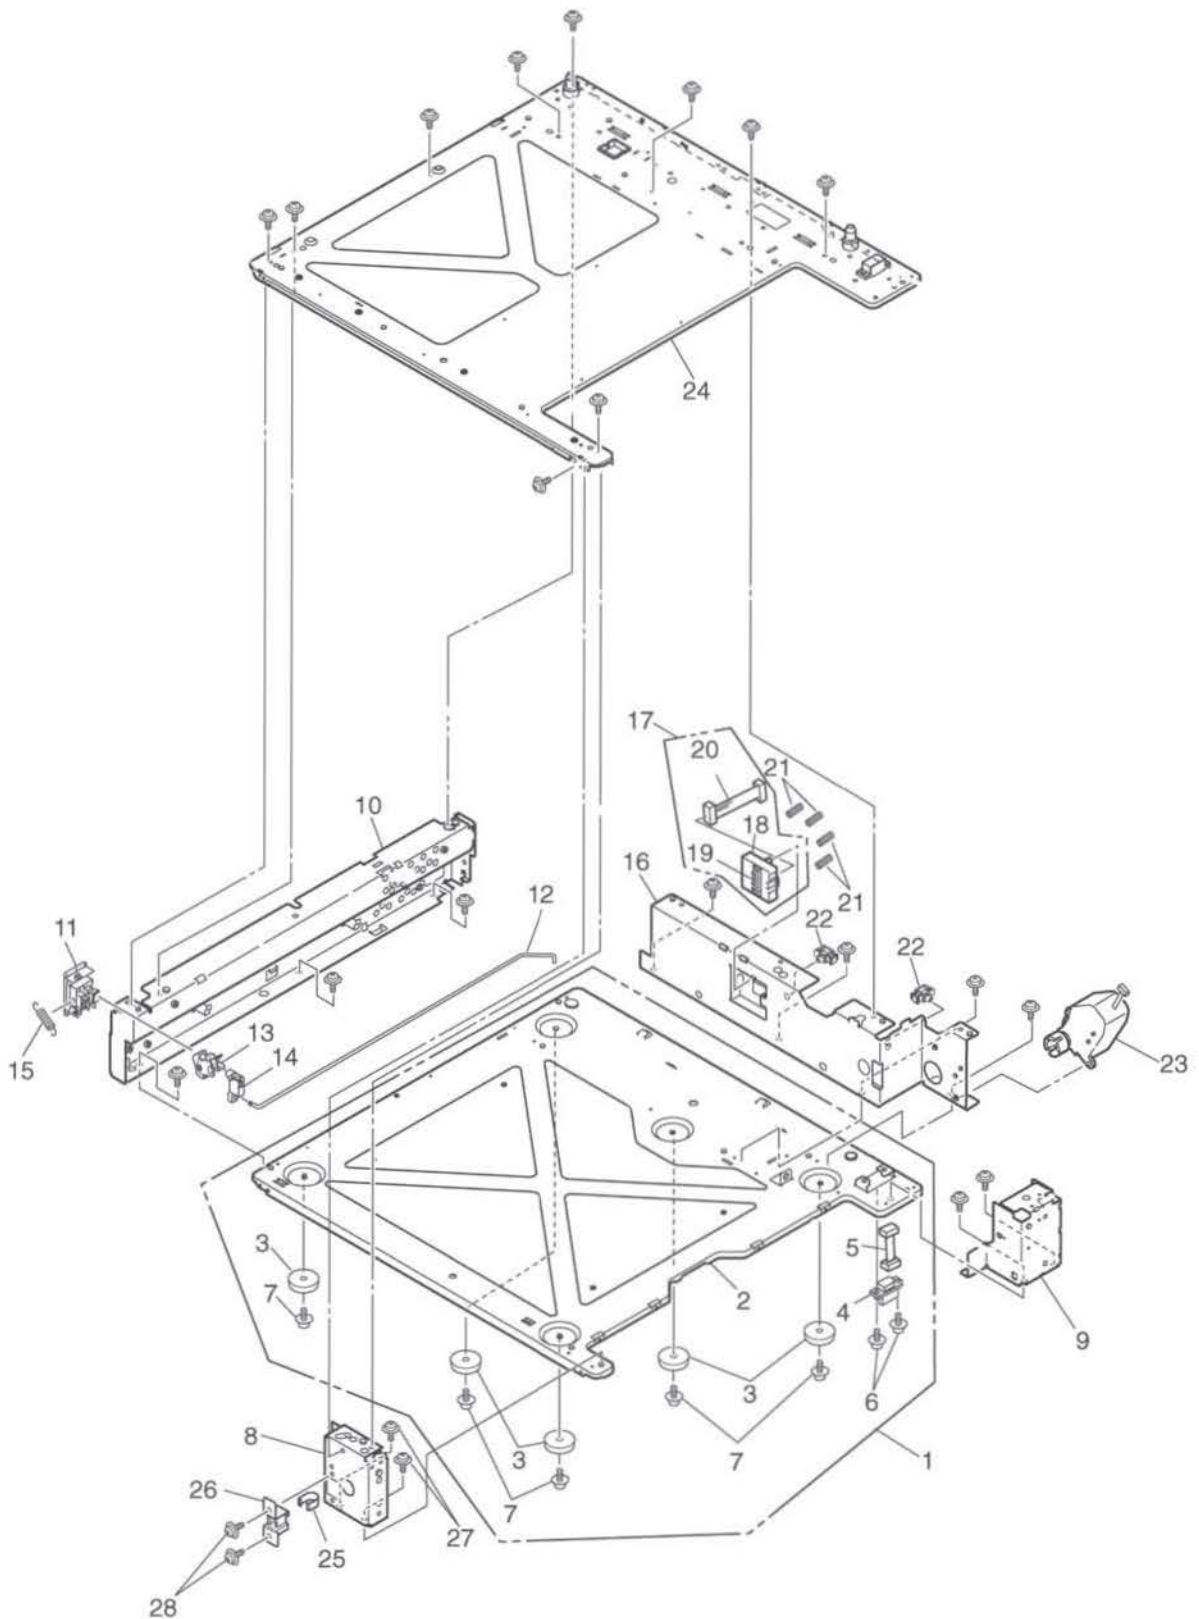

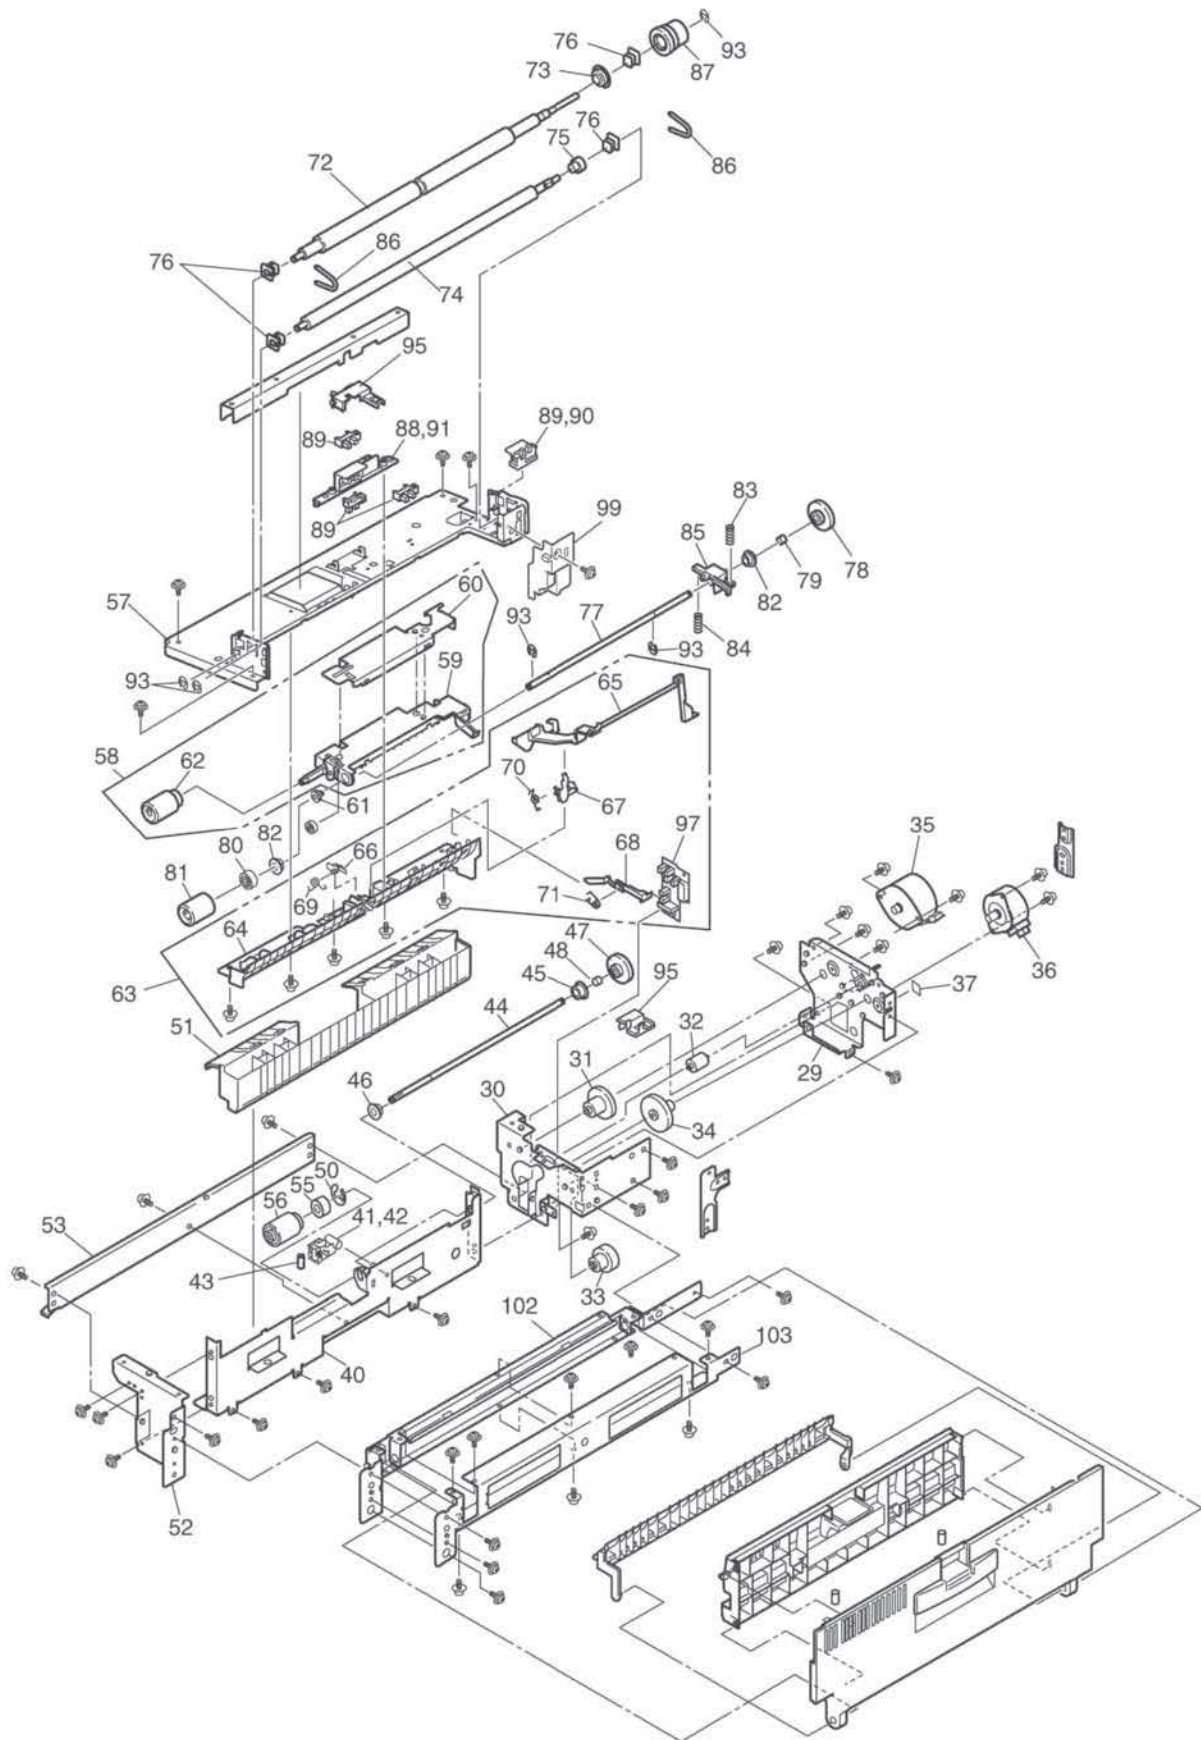


No.	Parts No.	Name	Remarks
1	0ZZ42692801//	Plate Assy.-Bottom	Assy(Include:No.2-7)
2		Plate-Bottom	
3		Rubber-Foot	
4		IMSA-9714N-14Z02 Connector-SQR -	
5		CONN Cord-JST10P,AMP4P-AMP7PX2	
6		Cup_Screw A	
7		Cup-Screw-E L=6	
8		Pillar-F	
9		Pillar-R	
10		Plate-Stay-Caulking	
11	0ZZ42693501//	Cover-switch	
12	0ZZ42693601//	Shaft-Switch	
13	0ZZ42693701//	Switch-AC	
14	0ZZ42693801//	Link-Switch	
15	0ZZ42865201//	Spring-Switch	
16		Plate-Rear	
17	0ZZ42694101//	Sensor Assy.-	Assy(Include:No.18-20)
18		Holder-PS-Switch	
19		HS12-0001 Switch-Push -	
20		CONN Cord-AMP5-AMP5P	
21		Spring-PS	
22		Clamp-Cable	
23	0ZZ42694601//	Geard-Motor(1st)	
24		Plate-Top-Welding	
25		Plate-Rock	
26	0ZZ42695101//	Lock-Cassette	
27		Cup_Screw (S Tight M3)	
28		Cup_Screw A	
29		Plate-Motor-A	
30		Plate-Motor-B	
31	0ZZ42695701//	Gear-Hopping-Z68-19	
32	0ZZ42695801//	Gear-Idle-Retard	
33	0ZZ42695901//	Gear-Feed-Z53-18	
34	0ZZ42696001//	Gear-Idle-Z48	
35	0ZZ42629401//	Motor-Pulse-Fuser	
36	0ZZ42890201//	Motor-Pulse-Regist	
37		Clamp-Cable	
38		CONN Cord-AMP8P-JST4P,AMP4P	
39		Cup_Screw (S Tight M3)	
40		Plate-Retard-Caulking	
41		Lever-Retard	
42		Holder-Spring	
43		Spring-Retard	
44		Shaft-Retard	
45		Bearing-Metal	
46		Bearing-Metal	
47	0ZZ42698001//	Gear-Z38(oneway)	
48		Collar	
49		Pin-Spring	
50		Ring	
51	0ZZ42698201//	Guide-Paper-Lower	
52		Plate-Retard-F	
53		Plate-Rail-R	
54		Cup_Screw (S Tight M3)	

55		Torque-Limiter-OTLV	
56	0ZZ41766501//	Roller-Feed	
57		Plate-Feed	
58	0ZZ42699001//	Roller Assy.-Pick-Up	Assy(Include:No.59-62)
59		Frame-PickUp	
60		Plate-PickUp	
61	0ZZ42832201//	Gear-Idle-Z20	
62	0ZZ42699401//	Roller-Pick-Up	
63	0ZZ42699601//	Frame Assy.-Feed	Assy(Include:No.63-71)
64	0ZZ42699701//	Frame-Feed	
65		Lever-End	
66		Lever-Regist	
67		Lever-Hopping	
68		Lever-Near-End	
69		Spring-Lever-Regist	
70		Spring-Lever-Hopping	
71		Spring-Near-End	
72	0ZZ42700601//	Roller-Regist1	
73	0ZZ40301801//	Gear-Regist	
74	0ZZ42700801//	Roller-Pressure1	
75		Gear-PRB	
76		Bearing-Regist	
77		Shaft-Feed	
78	0ZZ42698001//	Gear-Z38(oneway)	
79		Collar	
80		Gear-Feed	
81	0ZZ43000601//	Roller-Feed	
82		Bearing-Metal	
83	0ZZ42701501//	Spring-PickUp	
84	0ZZ42701601//	Spring-Release	
85		Lever-Release	
86	0ZZ42701801//	Spring-Regist	
87	0ZZ42863401//	Gear-Assy-Clutch	
88		Holder-Photo-Sensor	
89	0ZZ40135301//	Photo-Interrupter	
90		Holder-Co-Sensor	
91		CONN Cord-AMP9P-AMP3PX3	
92		TappingScrew-B2 L=8	
93		Ring	
94	0ZZ42999001//	Spring-FG-CL1	
95		Holder-PESNS	
96		AMP3P-AMP3P CONN Cord-Wire	
97	0ZZ42868401//	OR-S2C (Entrance SNS Bd)	
98	0ZZ42646301//	CONN Cord-AMP10P-AMP10P	
99	0ZZ42703101//	Cover-SNS	
100		Cup_Screw (S Tight M3)	
101		BU03P-TR-PC-H(LF) Connector-Plug-	
102		Plate-Grip	
103		Plate-Grip-Sub	
104		Cup_Screw (S Tight M3)	
105		Cup_Screw A	
106		Cup_Screw (S Tight M 3)	
107	0ZZ42931801//	Roller-set-723	
108		Roller-set-723	
109		Roller-set-723	
110		Roller-set-723	

WWW.SERVICE-MANUAL.NET

Where no part number exists, the parts are only available in their respective assemblies.

Side-R-Assy

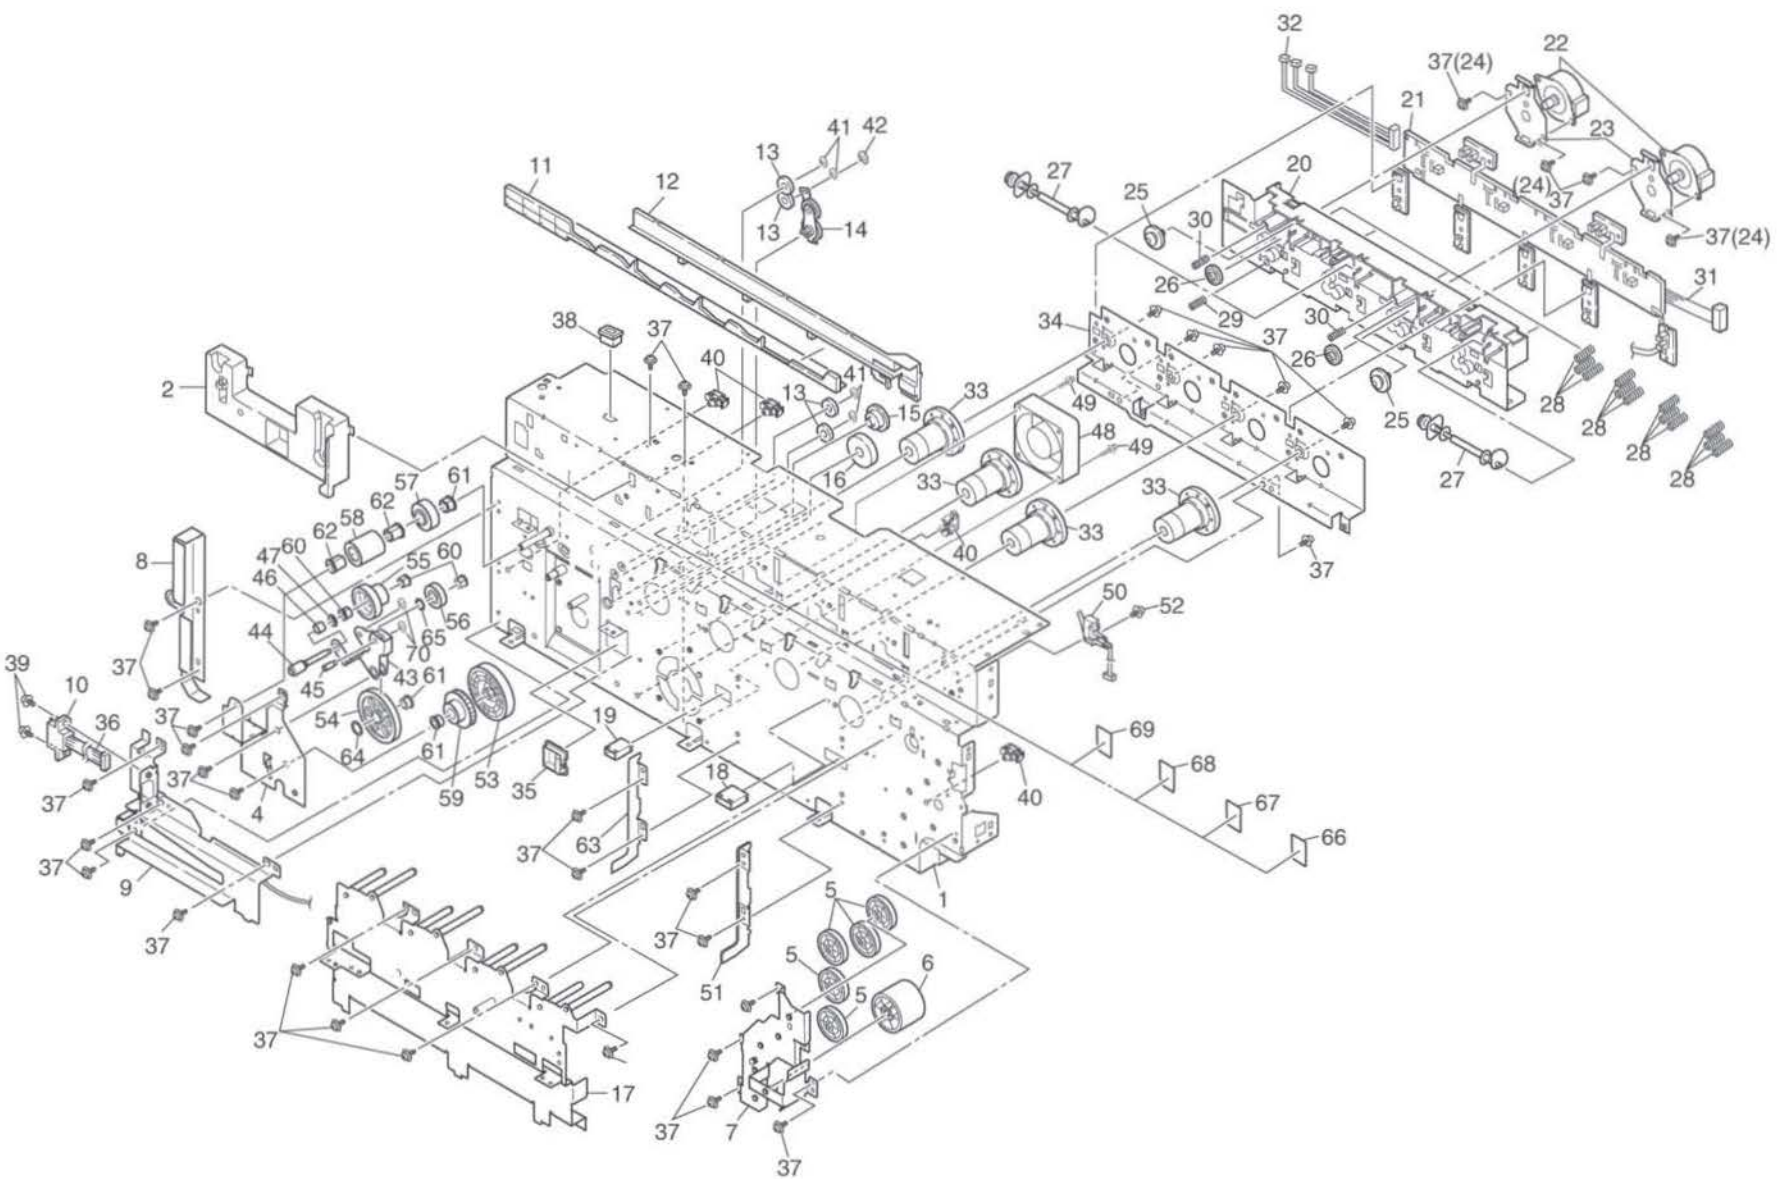


No.	Parts No.	Name	Remarks
1		Plate-Side-R-Caulking	
2	0ZZ42839601//	Guide-Bracket-FU	
3	0ZZ42724101//	Gear-Z17-FU	
4		Plate-BKT-Fuser	
5	0ZZ42724601//	Gear-idle(Z39)	
6	0ZZ42724801//	Gear-Idle(Z44)	
7		Plate-Side(RER)Caulking	
8		Plate-Stacker-Rear	
9		Plate-Rail-Rear	
10		IMSA-9714N-14Z02 Connector-SQR -	
11		Slider-Liftup-R	
12		Holder-Slider-R	
13	0ZZ42730101//	Gear-Idle-Link	
14		Planet Assy.-R	
15	0ZZ42828301//	Gear-Idle-Liftup-Z20-30	
16	0ZZ42730701//	Gear-Idle-Lift-UP-Z37	
17		Bracket-Inner-Caulking	
18		Guide-Cable-A	
19		Guide-Cable-B	
20		Guide-Rear	
21	0ZZ42868301//	OR-SGG (ID System SNS PWB)	
22	0ZZ42863901//	Motor-Pulse(Toner-Shutter)	
23	0ZZ42732501//	Plate-Motor	
24		Cup_Screw (S Tight M3)	
25		Gear-Z14-42	
26		Gear-Z14-35	
27		Camshat	
28		Spring-ID-Fuse	
29		Spring-FG	
30	0ZZ43027601//	Spring-Press-FG	
31		CONN Cord-JST9P-AMP3P,JST3PX2	
32		CONN Cord-JST24P-JST24P	
33	0ZZ42960701//	Gear-Idle-Drum	
34		Plate-Bracket-Outer	
35	0ZZ42734701//	Guide-Cable-FU	
36		CONN Cord-AMP13P-AMP7P,AMP7P	
37		Cup_Screw (S Tight M3)	
38		292254-3 Connector-Plug-	
39		Cup_Screw A	
40		Clamp-Cable	
41		Ring	
42		Ring	
43		Plate-Planet	
44		Post-Planet-A	
45		Post-Planet-B	
46		Spring-Planet	
47		Washer	
48	0ZZ42743801//	Motor-Fan	
49		Screw (SW+2W)	
50	0ZZ42983401//	CONN Cord-JST5P-SW	
51		Plate-Support-D	
52		Screw-PSW2W2-10C	
53	0ZZ43049801//	Gear-Z77-FU	
54	0ZZ43049901//	Gear-Z47-FU	
55	0ZZ43050001//	Gear-Z14-Z24-FU	

Where no part number exists, the parts are only available in their respective assemblies.


56	0ZZ43050101//	Gear-Planet-Z16-FU	
57	0ZZ43050201//	Gear-Z20-FU	
58	0ZZ43050301//	Gear-Z17-FU	
59	0ZZ43050401//	Gear-Z16-FU	
60		Bush-4	
61		Bush-6	
62		Bush-6	
63		Plate-Support-D2	
64		Spacer-Coupling(STW8.0-0.13)	
65		Spacer-Coupling	
66		Label-ID-Position	
67		Label-ID-Position-Y	
68		Label-ID-Position-M	
69		Label-ID-Position-C	

Side-F-Assy

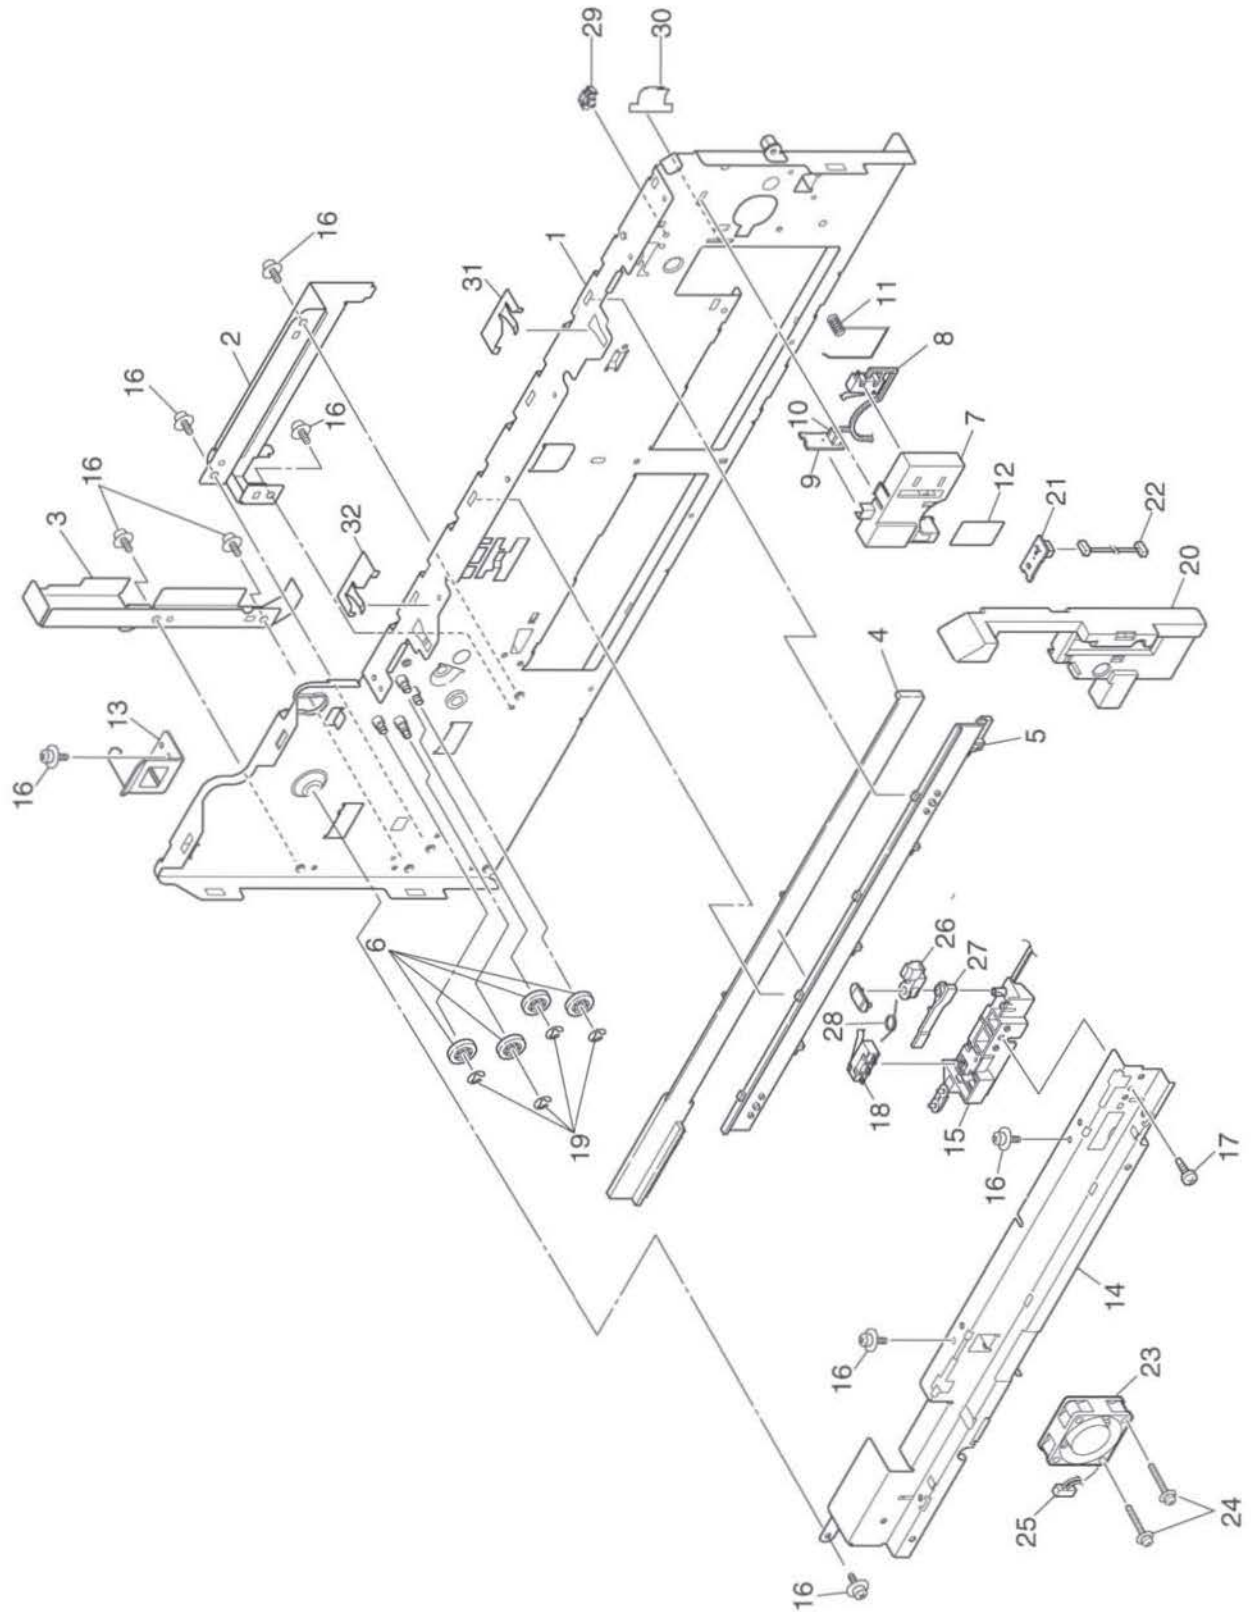


No.	Parts No.	Name	Remarks
1		Plate-Side-F-Caulking	
2		Plate-Rail-Front	
3		Plate-Stracker-Front	
4		Slider-LiftUP-F	
5		Holder-Slider-F	
6	0ZZ42730101//	Gear-Idle-Link	
7		Bracket-Sensor-	
8	0ZZ42650501//	CONN Cord-AMP2P-SW	
9	0ZZ42970901//	OR-HAL	
10		CONN Cord-AMP3P-JST3P	
11	0ZZ43056301//	Spring-FG-SW-F	
12		Label-Cover-OPT	
13		Plate-Guide(L)	
14		Plate-Base(OP)	
15		Holder-Cover-Open-SW	
16		Cup_Screw (S Tight M3)	
17		TappingScrew-B2 L=8	
18	0ZZ42538001//	CONN Cord-JST2P-SW	
19		Ring	
20	0ZZ42709601//	Cover-Guard(R)	
21	0ZZ42970901//	OR-HAL	
22		CONN Cord-JST6P-JST3PX2	
23	0ZZ42763302//	Motor-Fan	
24		Screw (SW+2W)	
25		BU03P-TR-PC-H(LF) Connector-Plug-	
26	0ZZ43048901//	Lever-Co-A	
27	0ZZ43049001//	Lever-CO-B	
28		Spring-Torsion-CO	
29		Clamp-Cable	
30		Clamp-Cable-Film	
31		Plate-FG-Top-F-A	
32		Plate-FG-Top-F-B	

Duct-Drive-Assy

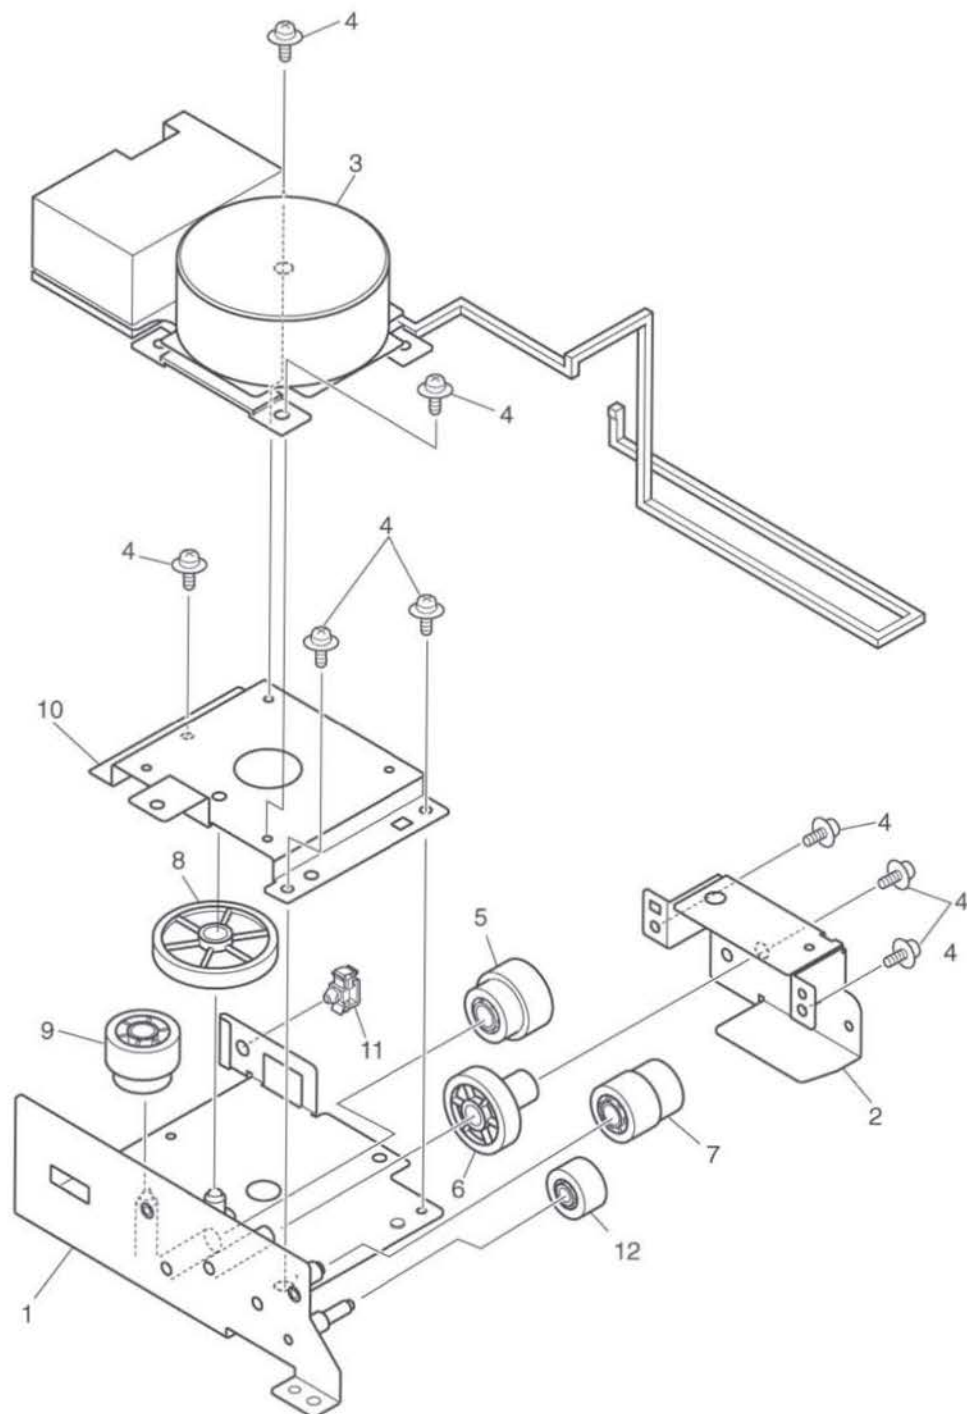

No.	Parts No.	Name	Remarks
1		Plate-Bracket-Motor Caulking	
2	0ZZ42978601//	Plate-Motor-Sub	
3	0ZZ42892401//	Motor-DC(DISTONER)	
4		Cup_Screw (S Tight M3)	
5	0ZZ42913701//	Gear-WT-Z18-Z20	
6	0ZZ42978701//	Gear-WT-Z30	
7	0ZZ42913901//	Gear-WT-Z15-Z21	
8	0ZZ42914301//	Gear-WT-Z56	
9	0ZZ42914401//	Gear-WT-Z18-Z25	
10		Plate-Motor-DC	
11		Clamp-Cable	
12	0ZZ42967201//	Gear-WT-Z14	

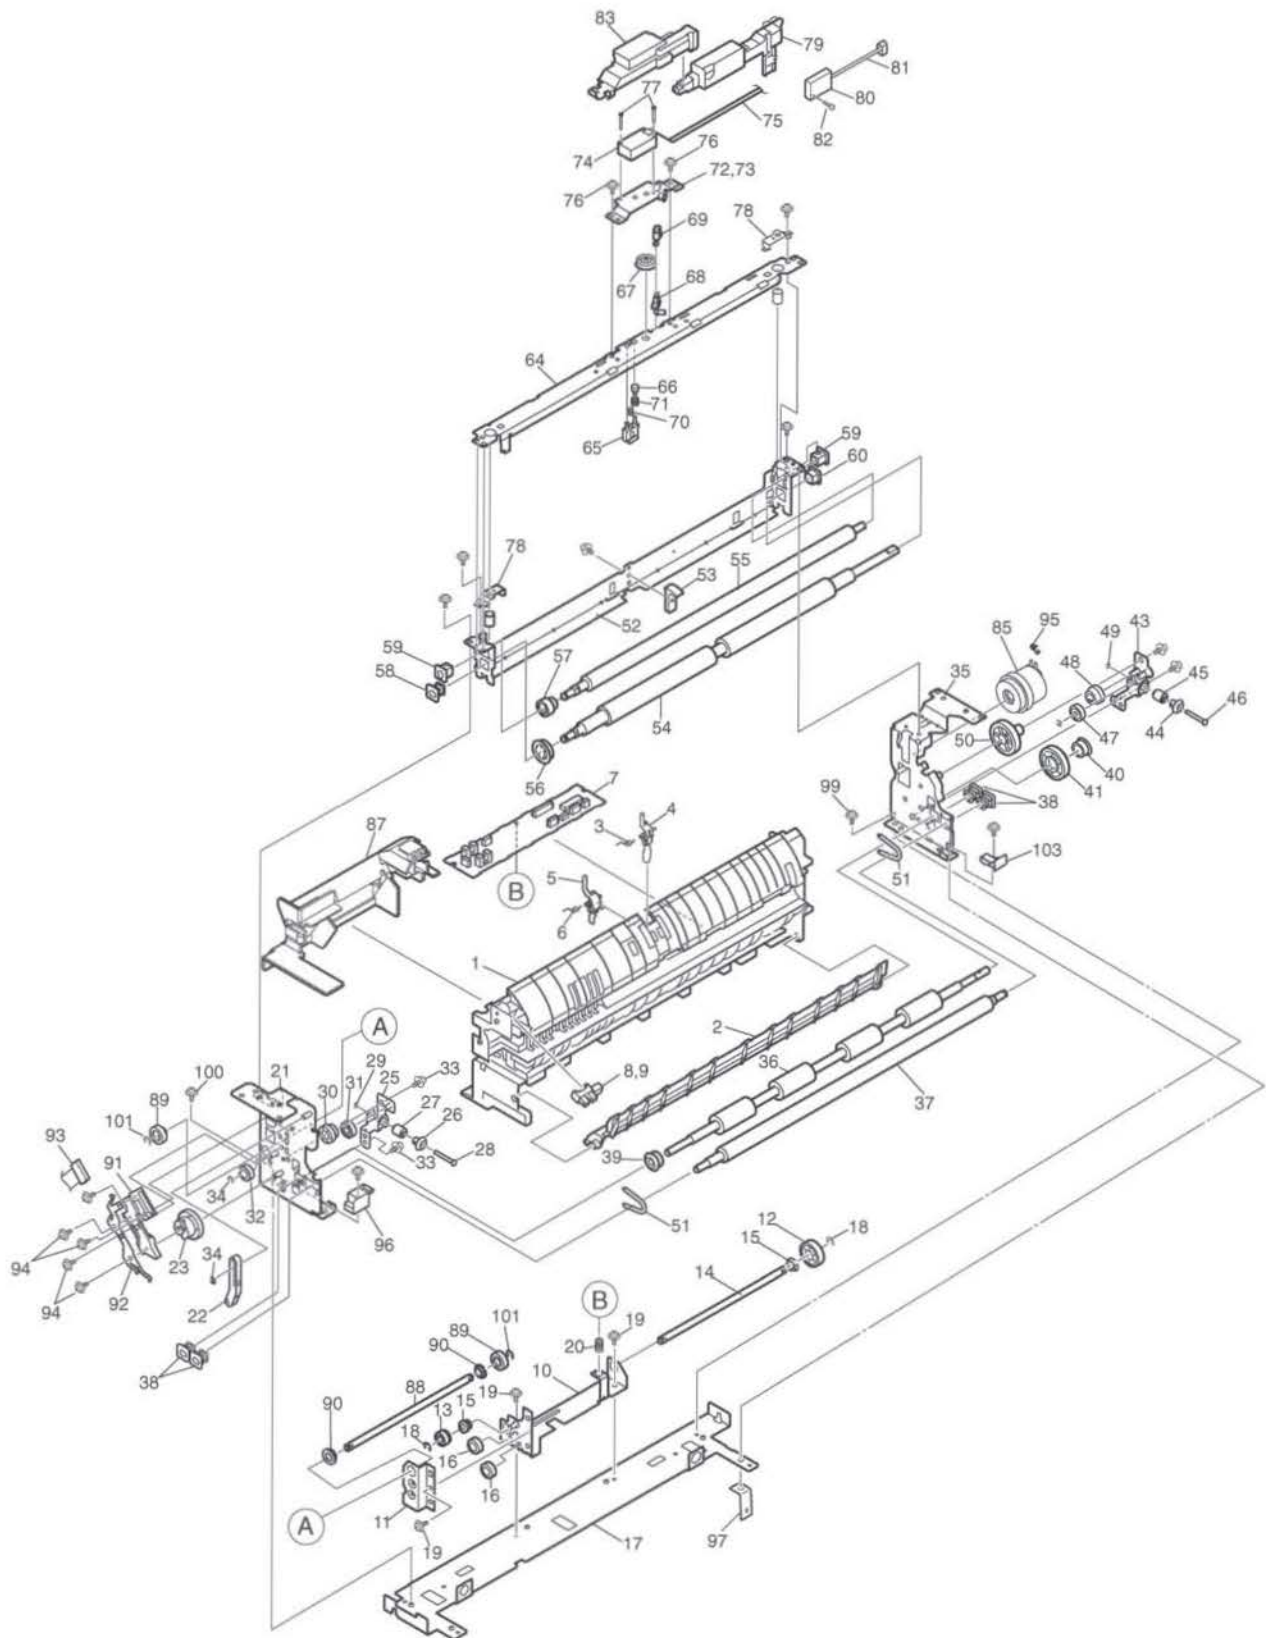


No.	Parts No.	Name	Remarks
1		Frame-Regist	
2		Guide-Regist	
3		Spring-Torsion(IN2)	
4		Lever-Sensor(IN2)	
5		Lever-Sensor(WR)	
6		Spring-Torsion(WR)	
7		OR-S2S (Paper Size PWB)	
8	0ZZ40135301//	Photo-Interrupter	
9		CONN Cord-AMP3P-AMP3P	
10		Plate-BKT-Connect A Caulk	
11		Plate-BKT-Connect B	
12	0ZZ42978801//	Gear-Connection-Z21	
13	0ZZ42913101//	Gear-Connection-Z14	
14	0ZZ42913201//	Shaft-Connection A	
15		Bush	
16	0ZZ42739201//	Gear-Idle-D	
17		Plate-Base	
18		Ring	
19		Cup_Screw (S Tight M3)	
20	0ZZ42973801//	Spring-Earth(S2S)	
21		Plate-Front(Regist)Caulking	
22		Stay-MPT	
23	0ZZ42859601//	Gear-Coupling-A-Assy	
24	0ZZ42973101//	Plate Assy.-Link(Front)	Assy(Include:No.25-29)
25		Plate-Link(Front)-Caulking	
26		Gear-Bevel(Z14)	
27		Gear-Worm(P2)-Front	
28		Shaft-Warm	
29		Ring	
30	0ZZ42745001//	Gear-Wheel(Z30)-Front	
31	0ZZ42746301//	Gear-Idle(Z16)	
32	0ZZ42739201//	Gear-Idle-D	
33		Cup_Screw (S Tight M 3)	
34		Ring	
35		Plate-Rear(Regist)Caulking	
36	0ZZ42747201//	Roller-Feed(M)	
37	0ZZ42747301//	Roller-Pressure(M)	
38	0ZZ42804602//	Bearing-Regist	
39		Gear-OnewayBevel(Z20)	
40	0ZZ42747402//	Gear-OnewayBevel(Z20)	
41	0ZZ42747601//	Gear-Feed-Z36	
42	0ZZ42973701//	Plate Assy.-Link(Rear)	Assy(Include:No.43-49)
43		Plate-Link(Rear)Caulking	
44		Gear-Bevel(Z14)	
45		Gear-Worm(P2)-Rear	
46		Shaft-Warm	
47		Gear-Idle(Z16)	
48		Gear-Wheel(Z30)-Rear	
49		Ring	
50	0ZZ42745801//	Gear-Idle(Z37)	
51		Spring-Pressure	
52		Plate-Holder(Regist)	
53	0ZZ42943901//	Stage-Pickup 723	
54	0ZZ42747901//	Roller-Regist(2)	

WWW.SERVICE-MANUAL.NET

55	0ZZ42748001//	Roller-Pressure(2)	
56	0ZZ40301801//	Gear-Regist	
57	0ZZ41066801//	Gear-PRB	
58	0ZZ42804602//	Bearing-Regist	
59	0ZZ42948001//	Bearing-Regist2	
60	0ZZ43012601//	Bearing-Regist(CL2)	
62		Cup_Screw (S Tight M3)	
63		Ring	
64		Plate-Top(Regist)Caulking	
65	0ZZ42943801//	Lever-Pickup 723	
66		Gear-SH1	
67		Gear-SH2	
68		Gear-SH3	
69		Cap-SH	
70		Spring-SH1	
71		Spring-SH2	
72		Spring-Detent-Re	
73	0ZZ42749501//	Plate-Thickness	
74		D6E-K SENSOR-Magnet -	
75		CONN Cord-AMP4P-JST3P	
76		Cup_Screw (S Tight M3)	
77		Screw	
78	0ZZ42944101//	Plate-Pressure	
79	0ZZ42749601//	Cover-Thickness	
80		HSU-06A1T1 SENSOR-Temp -	
81	0ZZ42533701//	CONN Cord-JST4P-JST4P	
82		TappingScrew-B2 L=8	
83	0ZZ42997601//	Cover-Thickness(Front)	
84		Cup_Screw (S Tight M 3)	
85	0ZZ43003201//	Gear Assy.-CL(Reg2)	
86		Pin	
87	0ZZ42743701//	Duct-Fan	
88		Shaft-Connection A	
89	0ZZ42913401//	Gear-Connection-Z18	
90		Bush	
91		Bracket-Contact	
92		Plate-FG-REG	
93		MRH9355/HV-38-100MKRES-MET solid -	
94		TappingScrew-B2 L=8	
95		Spring-FG(CL)	
96		Spacer-Lock-F	
97		Plate-Support	
98		Cup_Screw (S Tight M3)	
99		Cup_Screw A	
100		TappingScrew-B2 L=8	
101		Ring	
102		Ring	

FDR-Unit-MPT

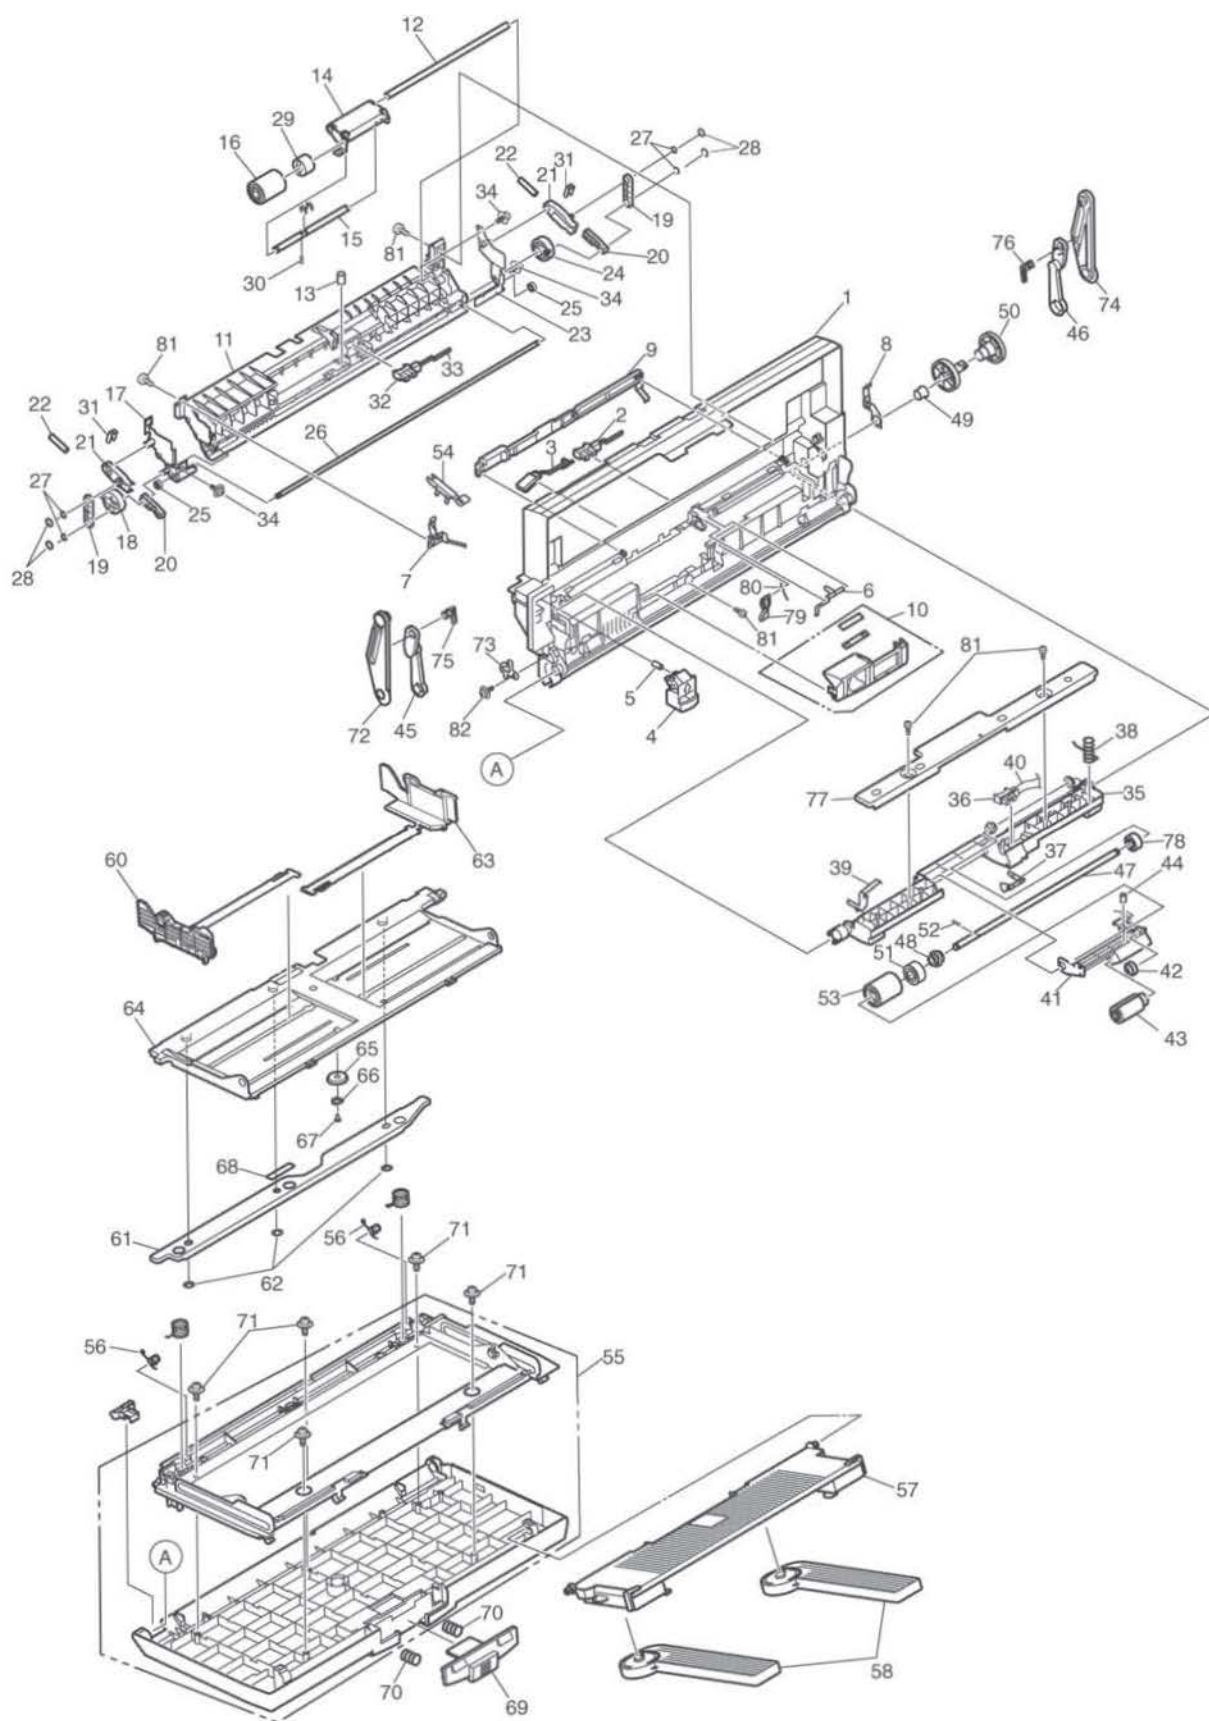


WWW.SERVICE-MANUAL.NET

No.	Parts No.	Name	Remarks
1	0ZZ42750501//	Frame-MPT	
2	0ZZ40135301//	Photo-Interrupter	
3	0ZZ41842802//	Photointerrupter(REWORK)	
4		Lever-Handle-MPT	
5		Spring-Handle	
6	0ZZ42750801//	Lever-Hopping	
7		Plate-Earth(MPT)Front	
8		Plate-Earth(MPT)Rear	
9	0ZZ42751001//	Cover-Sensor(MPT)	
10	0ZZ43012701//	Guide Assy.-Friction	
11	0ZZ42751201//	Guide-Sheet(MPT)	
12	0ZZ42751301//	Shaft-Retard(Drive)	
13		Spring-Reatrd	
14		Plate-Retard	
15		Shaft-Retard(Driven)	
16	0ZZ43013001//	Roller-Feed	
17		Plate-Arm(Front)Caulking	
18		Gear-Link(Z27)Front	
19		Lever-Link	
20		Lever-Arm	
21		Holder-Arm	
22		Spring-Arm	
23		Plate-Arm(Rear)Caulking	
24	0ZZ42810001//	Gear-Link(Z27)Rear	
25	0ZZ42961501//	Gear-Link-Z12	
26		Shaft-Link	
27		Spacer-Coupling	
28		CS-RING (CS3-SUS)	
29	0ZZ42988601//	Torque-Limiter-OTLV	
30		Pin-Spring	
31		Plate-Support(Arm)	
32	0ZZ40135301//	Photo-Interrupter	
33		CONN Cord-JST3P-AMP3P	
34		TappingScrew-B2 L=8	
35		Frame-Feeder	
36	0ZZ40135301//	Photo-Interrupter	
37	0ZZ42753101//	Lever-PaperEnd(MPT)	
38		Spring-Earth(Feeder)	
39		Plate-Earth(Feeder)	
40		CONN Cord-AMP10P-AMP3PX2,JST3P	
41		Holder-Pickup	
42	0ZZ42052001//	Gear-Planet(Z20)-HP	
43	0ZZ42954401//	Roller Assy.-Pickup	
44	0ZZ42753301//	Spring-Pickup	
45		Stay-Hopper(Front)	
46		Stay-Hopper(Rear)	
47		Shaft-Feed	
48	0ZZ42752601//	Bearing-Feeder	
49	0ZZ42832301//	Bearing-Metal	
50	0ZZ42752801//	Gear-Oneway(Z38/Z53)	
51	0ZZ42752901//	Gear-Feed(Z25)	
52		Pin	
53	0ZZ42701302//	Roller-Feed(OW)	


54		Guide-Cable	
55	0ZZ42753701//	Hopper Assy.-MPT	Assy(Include:No.56-59,69-71)
56		Spring-FG	
57		Tray-SubHopper	
58		Supporter-Sheet	
59	0ZZ42934701//	Sheet-Recieve-Assy.	Assy(Include:No.60-68)
60		Frame-Hopper-MPT	
61		Plate-Beam-Hopper	
62		CS-2	
63		Guide-Paper(MPT)-R	
64		Guide-Paper(MPT)-F	
65		PINION GEAR B	
66		WAVE WASHER B	
67		Screw-T2D3-5	
68		Plate-Friction	
69	0ZZ42925901//	Lever-Lock(MPT)	
70	0ZZ42929101//	Spring-Lever(MPT)	
71		TappingScrew-B2 L=8	
72		Link-F(MPT)	
73		Plate-Hook-Front	
74		Link-R(MPT)	
75		Post-Stay_Front	
76		Post-Stay_Rear	
77		Plate-Cover(Feeder)	
78	0ZZ42060701//	Bush	
79	0ZZ43042001//	Lever-Paper(MPT)	
80		Spring-Paper(MPT)	
81		TappingScrew-B2 L=8	
82		Cup_Screw (S Tight M3)	
83	0ZZ42939701//	Roller-set-MPT-723	
84		Roller-set-MPT-723	
85		Roller-set-MPT-723	
86		Roller-set-MPT-723	

Eject-Assy

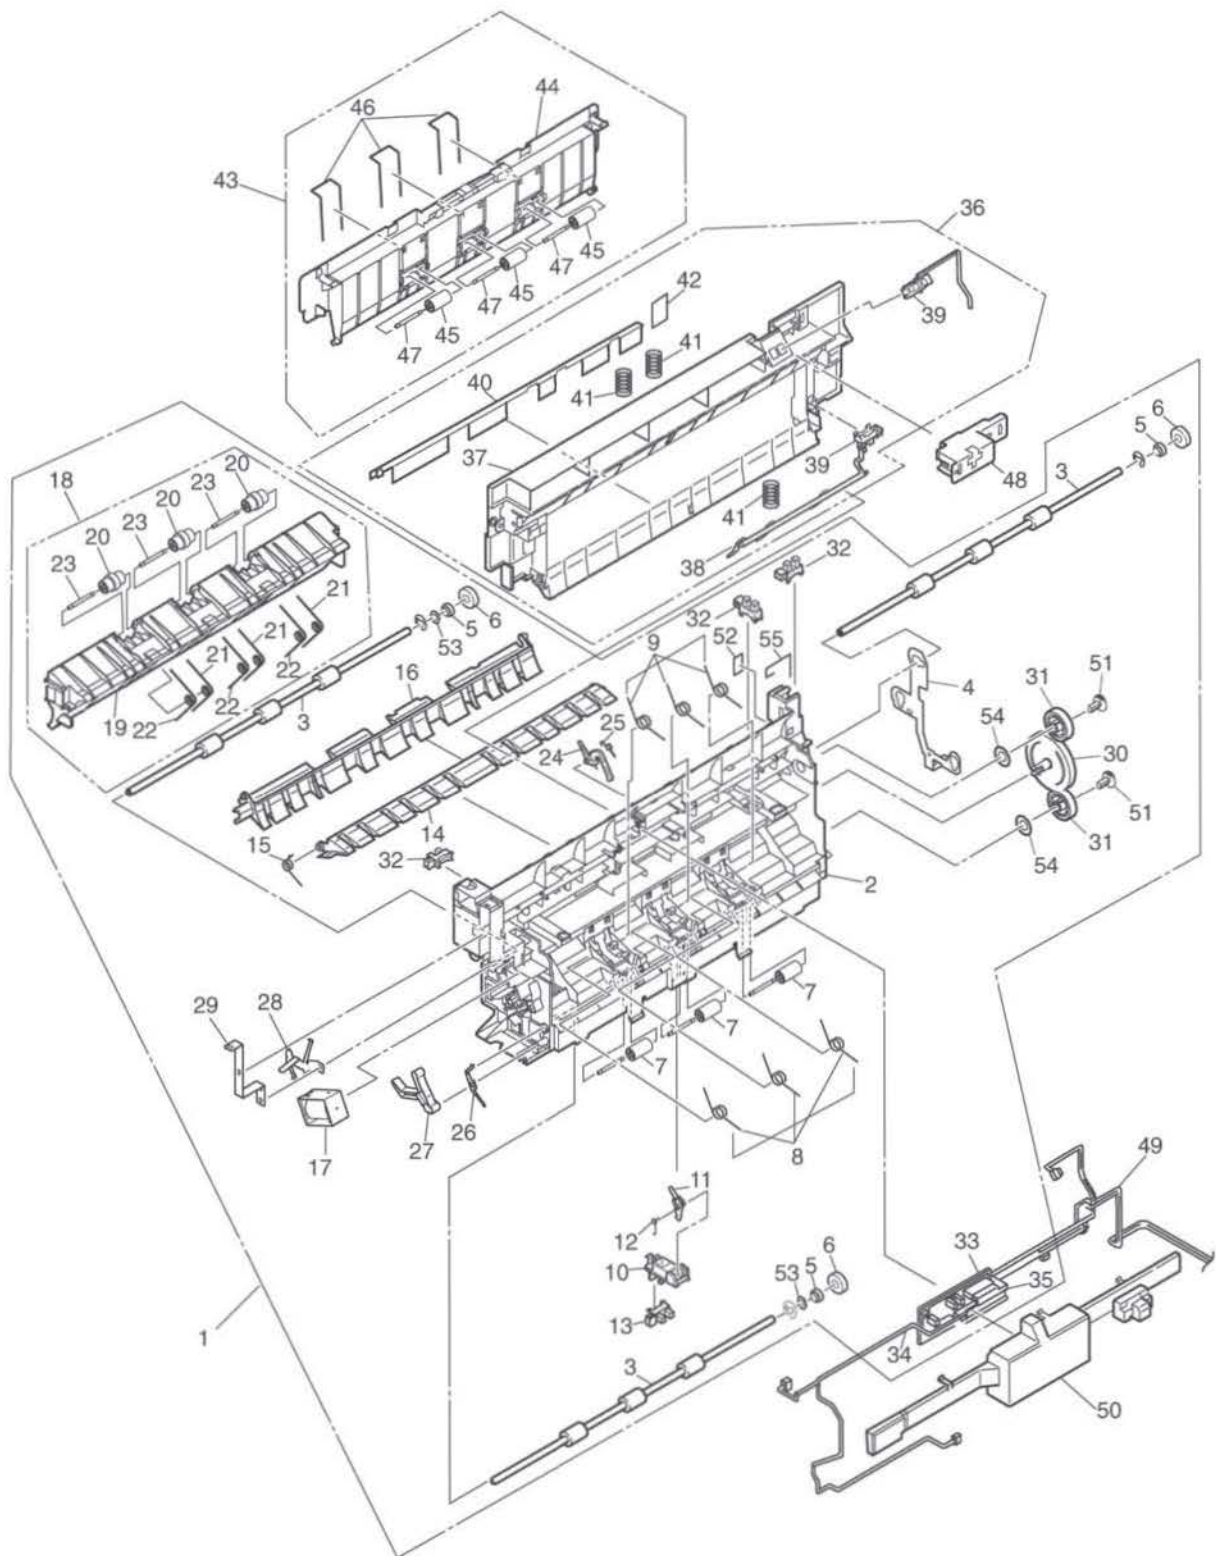


No.	Parts No.	Name	Remarks
1	0ZZ42757501//	Guide-Eject-Assy	Assy(Include:No.2-35)
2		Guide-Eject	
3	0ZZ42757401//	Roller-Eject	
4		Plate-FG_Eject-R	
5		Bush	
6	0ZZ42757801//	Gear-Eject_Z17	
7	0ZZ42757901//	Roller-Pinch-Eject	
8		Spring-Torsion-Eject	
9		Spring-Torsion-Eject	
10		Holder-Lever	
11	0ZZ42759301//	Lever-Exit_Sensor	
12		Spring-SNS(F/R)	
13	0ZZ40135301//	Photo-Interrupter	
14		Lever-Separator_DUP	
15		Spring-Separator_DUP	
16		Lever-Separator_Sheet	
17	0ZZ42758801//	DC-Solenoid-10SL-144	
18	0ZZ42758901//	Guide-Sheet-FU-Assy	Assy(Include:No.19-23)
19		Guide-Sheet-FU	
20	0ZZ42759101//	Roller Assy.-FU	
21		Spring-Torsion-FU	
22		Spring-Torsion-FU	
23		Shaft-Pinch	
24	0ZZ42759601//	Lever-Paper-END	
25	0ZZ42765301//	Spring-Paper-End(joboff)	
26		Plate-FG-Eject-L3	
27		Lever-Link-DUP	
28		Plate-FG-Eject-L1	
29		Plate-FG-Eject-L2	
30	0ZZ42760201//	Gear-Idle-Eject-Z54	
31		GEAR-IDLE-Eject_Z27	
32	0ZZ40135301//	Photo-Interrupter	
33	0ZZ42868501//	OR-S2R	
34		CONN Cord-AMP6P-AMP3PX2	
35		CONN Cord-AMP12P-AMP3PX4	
36	0ZZ42760401//	Guide-Eject-Outer- Assy.-	Assy(Include:No.37-42)
37		Guide-Eject-Outer	
38		Lever-Stacker-Full-FU	
39		Photo-Interrupter	
40		Sheet-Discharge(FU)	
41		Spring-Lock(Outer)	
42		Label-Cover-OPT	
43	0ZZ42760801//	Cover-Eject-Auter-Assy	Assy(Include:No.44-47)
44		Cover-Ejet-Outer	
45		Roller-Pinch-Eject	
46		Spring-Torsion-FD	
47		Shaft-Pinch	
48		Cover-SNS-FD	
49		CONN Cord-AMP13P-AMP13P	
50		Cover-Board	

Plate-Top-Assy

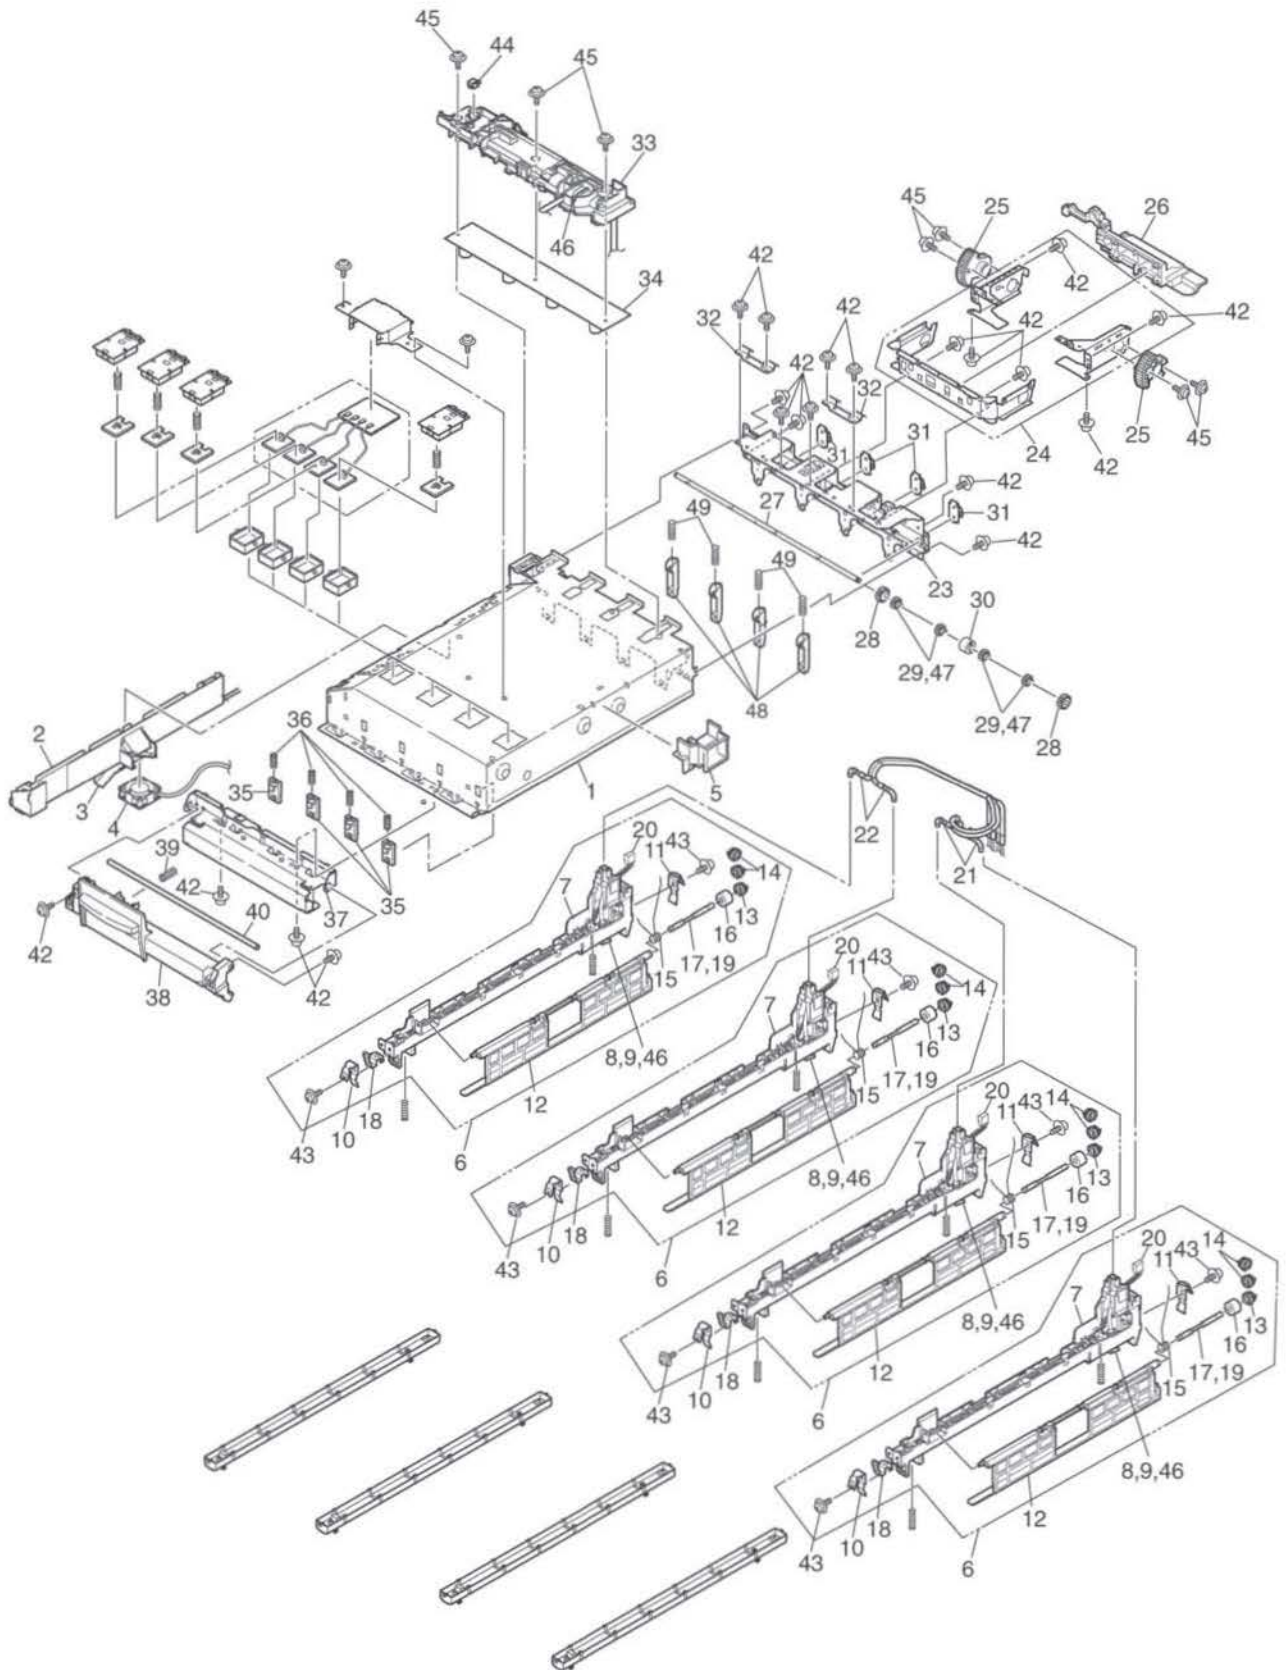


No.	Parts No.	Name	Remarks
1		Plate-Top-Welding	
2		Chamber-Duct-Top	
3	0ZZ42872101//	Spoiler-FAN	
4	0ZZ42763301//	Motor-Fan	
5		Holder-FAN-Intake	
6	0ZZ42763801//	Holder-Head- Assy.-	Assy(Include:No.7-19)
7		Holder-Head	
8		Clump-Cable-Head	
9		Spring-Torsion-100	
10		Plate-Contact-Head-F	
11		Plate-Contact-Head-R	
12		Plate-Shutter-LED1	
13		Gear-LED1	
14		Gear-LED4	
15		Spring-Torsion1	
16		Limiter-torque	
17		Post-shutter	
18		Plate-FG-Head-FS	
19		Pin	
20		CONN Cord-JST4P-JST4P	
21		CONN Cord-JST10P-JST10P	
22		CONN Cord-JST10P-JST10P	
23		Plate-Top-Support	
24		Plate-Pivot-Welding	
25	0ZZ42762201//	Gear-Damper-TOP	
26	0ZZ42763101//	Code-Cover-Top	
27	0ZZ42857701//	Shaft-LED-Shutter	
28	0ZZ42857301//	Gear-LED2	
29	0ZZ42857401//	Gear-LED3	
30		Limiter-torque	
31		Plate-FG-Top-R	
32		Plate-Clump-HCT	
33		Code-Guide-Top	
34	0ZZ42868601//	OR-S2H	
35		Holder-Spring-ID	
36		Spring-Tension	
37		Plate-Lock-Caulking	
38		Lever-Top	
39		Spring-Lock	
40		Shaft-Support-Lock	
41		Cup_Screw A	
42		Cup_Screw (S Tight M 3)	
43		TappingScrew-B2 L=8	
44		BU03P-TR-PC-H(LF)Connector-Plug-	
45		Cup_Screw A	
46		TYING CORD	
47		Pin	
48		Cap-Press-ID	
49	0ZZ42983701//	Spring-Press-ID	

Job-Offset-Assy

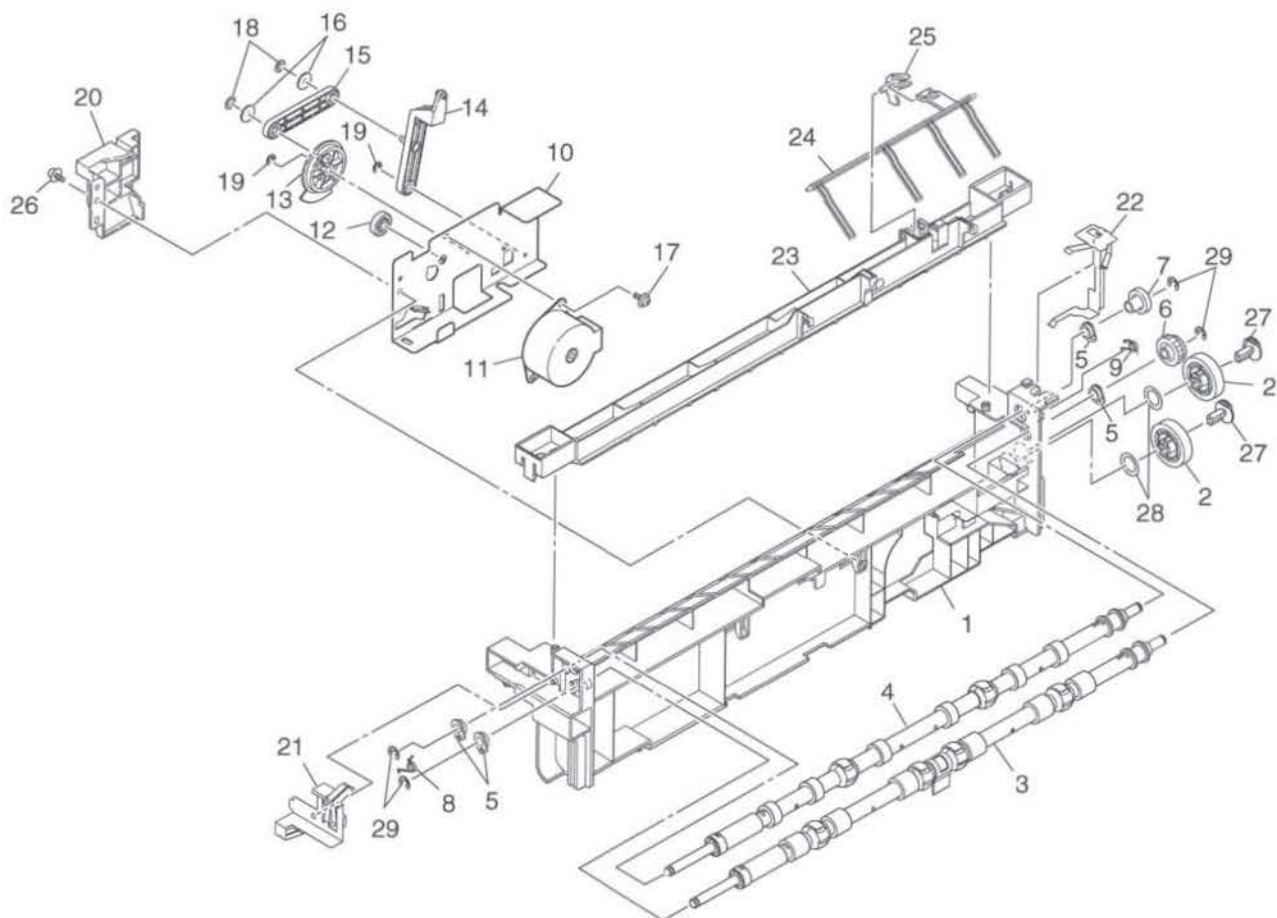

No.	Parts No.	Name	Remarks
1		Holder-Joboff-Lower	
2	0ZZ42760301//	GEAR-IDLE-Eject_Z27	
3	0ZZ42809001//	Pipe-Assy-Drive	
4	0ZZ42765801//	Pipe-Assy-Driven	
5		Bush-Shaft	
6	0ZZ43034301//	Gear-Drive	
7	0ZZ41351101//	Gear-Driven	
8		Spring-Bush-L	
9		Spring-Bush-R	
10		Bracket-Motor(Caulking)	
11	0ZZ42058201//	Motor-Resist	
12	0ZZ42766801//	Gear-Idle-Z28	
13	0ZZ42766901//	Gear-Link-Z60	
14		Lever-Link-B	
15		Lever-Link-A	
16		Washer - 2W3	
17		Cup_Screw (S Tight M 3)	
18		CS-RING (CS3-SUS)	
19		Ring	
20		Cover-Motor_Joboff	
21		Contact-Joboff-L	
22	0ZZ42767201//	Contact-Joboff-R	
23	0ZZ42767401//	Holder-Joboff-Upper	
24	0ZZ42767501//	Lever-Stacker-Full-F	
25	0ZZ42767601//	Lever-Stacker-Full-Sub	
26		TappingScrew-B2 L=8	
27		Limiter-Pin	
28		Spacer-Coupling	
29		Ring	

Basket-Assy

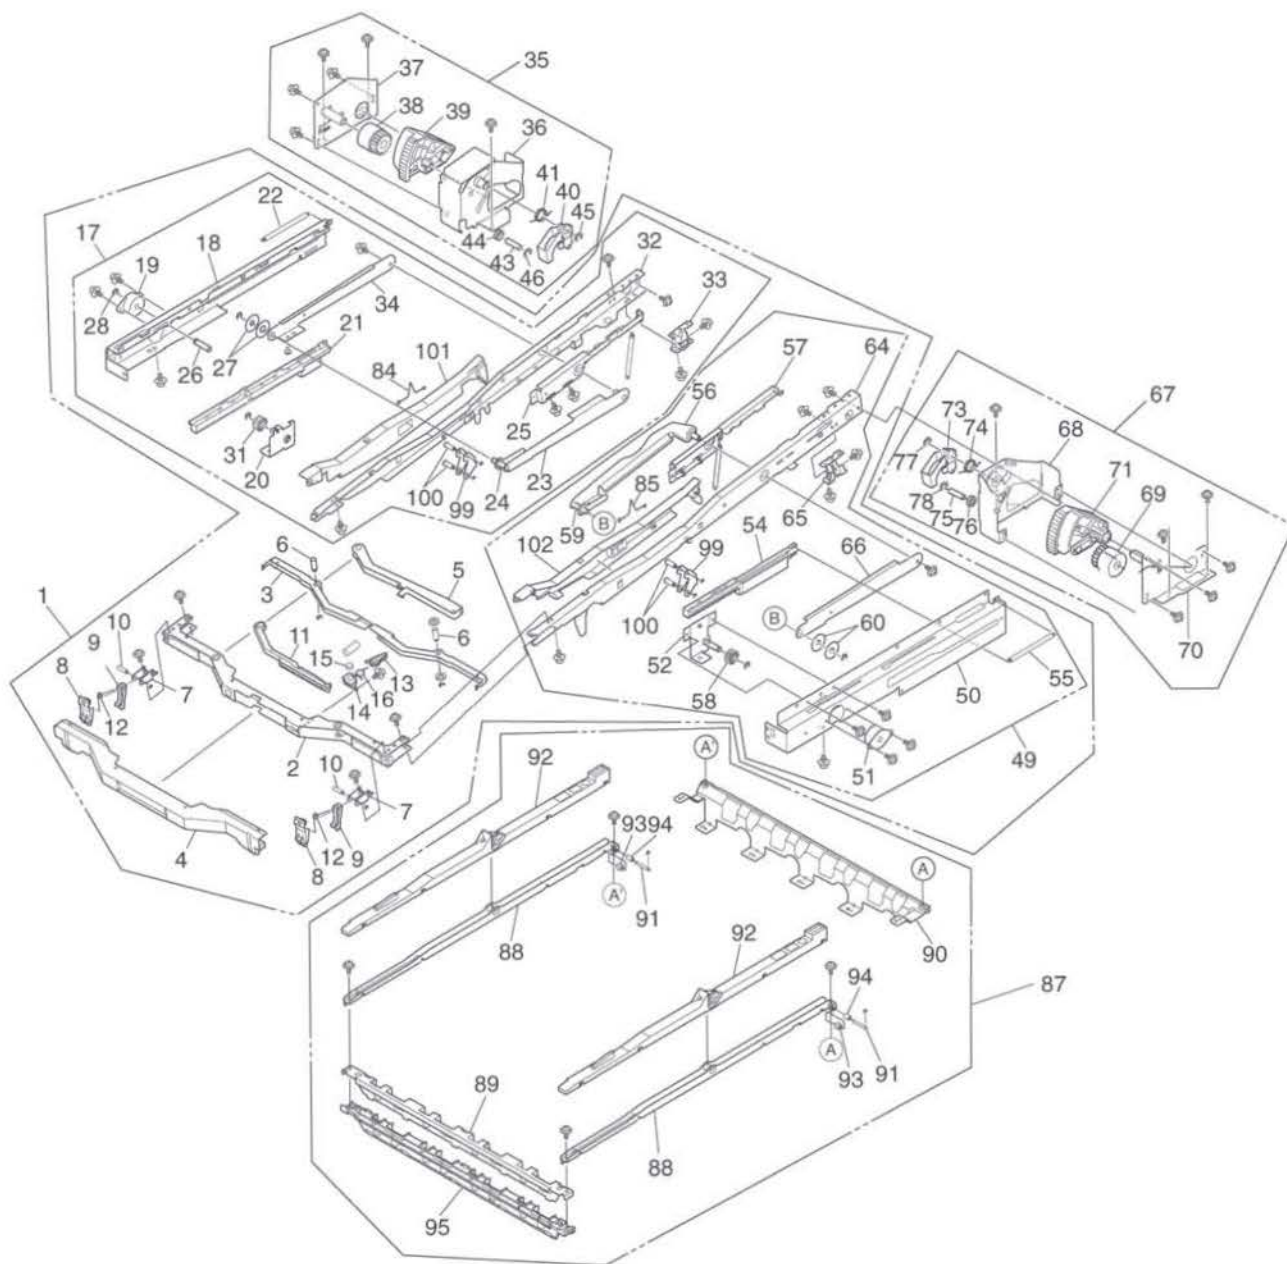

No.	Parts No.	Name	Remarks
1	0ZZ42769001//	Basket-Main-Assy	Assy(Include:No.2-17,49,81-86)
2		Plate-Bar	
3		Plate-Lever-01	
4		Lever-Basket-01	
5		Lever-Basket-02	
6		Post-Lever-01	
7		Plate-Lock-01	
8		Cover-Lock-Lever	
9		Plate-Lock-02	
10		Post-Lock-Lever	
11		Lever-Basket-03	
12		Spring-Lock-L	
13		Lever-Stopper	
14		Plate-Stopper	
15		Post-Stopper	
16		Spring-Stopper	
17	0ZZ42879001//	Link-Unit-L	Assy(Include:No.18-35,47-48)
18		Guide-Link-L	
19	0ZZ42919302//	One-Way-Hinge-L	
20		Plate-Damper-L	
21		Rack-Damper-L	
22		Spring-Lack-Damper-0.4	
23		Link-Caulking-L	
24		Post-Link-6	
25		Bracket-Link-L	
26		Post-One-Way	
27		Washer-6-22	
28		Ring	
29		Cup_Screw (S Tight M 3)	
30		Cup_Screw A	
31		Gear-Damper	
32		Plate-BKL	
33		Plate-Support-BK	
34		Plate-Link-L	
35	0ZZ42774401//	Gear Assy.-L	Assy(Include:No.36-46)
36		Plate-damper-L-Caulking	
37		Plate-Dumper-L2-Caulking	
38		Damper-R	
39		Gear-BKL	
40		Plate-Limiter	
41		Spring-Limiter L	
42		Cup_Screw (S Tight M 3)	
43		Post-Limiter-Roller	
44		Roller-Limiter	
45		Ring	
46		Ring	
47		Tap_Thigt_Screw	
48		Bearing-6-10-2.7T	
49		Link-Unit-R	Assy(Include:No.50-67,79-80)
50		Guide-Link-R	
51	0ZZ42919402//	One-Way-Hinge-R	
52		Plate-Damper-R	
53		Post-One-Way	

54		Rack-Damper-R	
55		Spring-Lack-Damper-0.4	
56		Link-Caulking-R	
57		Bracket-Link-R	
58		Gear-Damper	
59		Post-Link-6	
60		Washer-6-22	
61		Ring	
62		Cup_Screw (S Tight M 3)	
63		Cup_Screw A	
64		Plate-BKR	
65		Plate-Support-BK	
66		Plate-Link-R	
67	0ZZ42777401//	Gear Assy.-R	Assy(Include:No.68-78)
68		Plate-Damper-R-Caulking	
69		Damper-L	
70		Plate-Dumper-R2-Caulking	
71		Gear-BKR	
72		Cup_Screw (S Tight M 3)	
73		Plate-Limiter	
74		Spring-Limiter R	
75		Post-Limiter-Roller	
76		Roller-Limiter	
77		Ring	
78		Ring	
79		Tap_Thigt_Screw	
80	0ZZ43024901//	Bearing-6-10-2.7T	
81		Cup_Screw (S Tight M 3)	
82		Ring	
83		Screw-PSW3	
84		Spring-FG-L	
85		Spring-FG-R	
86		Gasket	
87	0ZZ42771801//	Basket-Inner- Assy.-	Assy(Include:No.88-97)
88		Plate-Beam	
89		Plate-BKF	
90		Plate-BK-Rear	
91		Post-Guide-Roller	
92		Cover-Beam	
93		Roller-Guide-BK	
94		Roller-Guide BK2	
95		Frame-BKF	
96		Ring	
97		Cup_Screw (S Tight M 3)	
98		Spring-BK	
99		Plate-Link	
100		Post-Basket-01	
101		Cover-BKL	
102		Cover-BKR	
103		Label-ID-Position-Bas	
104		Ring	



COPYRIGHT © 2005 BY SHARP CORPORATION

All rights reserved

Printed in U.S.A.

No part of this publication may be reproduced,
stored in a retrieval system, or transmitted,
in any form or by any means,
electronic, mechanical, photocopying, recording or otherwise
without prior permission of the publisher.

Trademark acknowledgements

All trademarks and copyrights are the property of their respective owners.